


CRANKSHAFT POSITION SENSOR

FUEL INJECTION (FUEL SYSTEMS)


5. Crankshaft Position Sensor

A: REMOVAL


- 1) Disconnect the ground cable from battery.

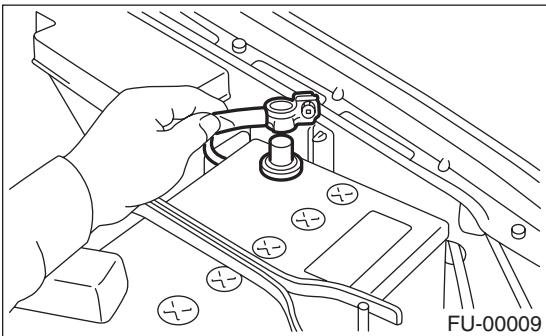

- 2) Remove the bolt which install crankshaft position sensor to the cylinder block.

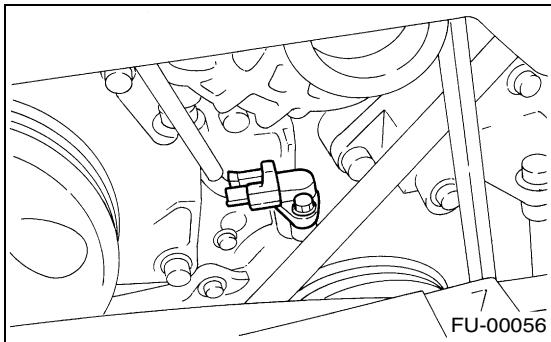

- 3) Remove the crankshaft position sensor, and disconnect the connector from the sensor.

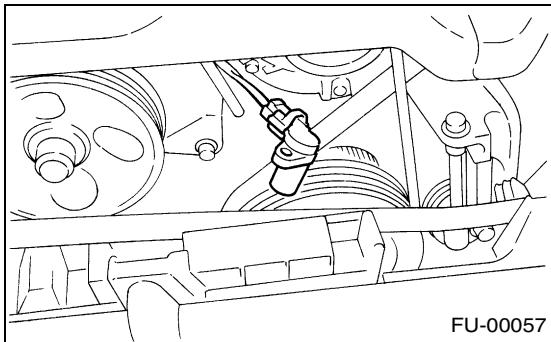

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

T: 6.4 N·m (0.65 kgf·m, 4.7 ft·lb)

