

GENERAL DESCRIPTION


IGNITION

1. General Description

A: SPECIFICATIONS

Item	Designation		
Ignition coil and ignitor assembly	Model	FH0137	
	Manufacturer	DIAMOND	
	Primary coil resistance	0.73 $\Omega \pm 10\%$	
	Secondary coil resistance	12.8 k $\Omega \pm 15\%$	
Spark plug	Insulation resistance between primary terminal and case	More than 100 M Ω	
	Type and manufacturer	CHAMPION: RC10YC4	
		Alter- nate	NGK: BKR5E-11
			NGK: BKR6E-11
	Thread size mm	14, P = 1.25	
	Spark gap mm (in)	1.0 — 1.1 (0.039 — 0.043)	

B: COMPONENT

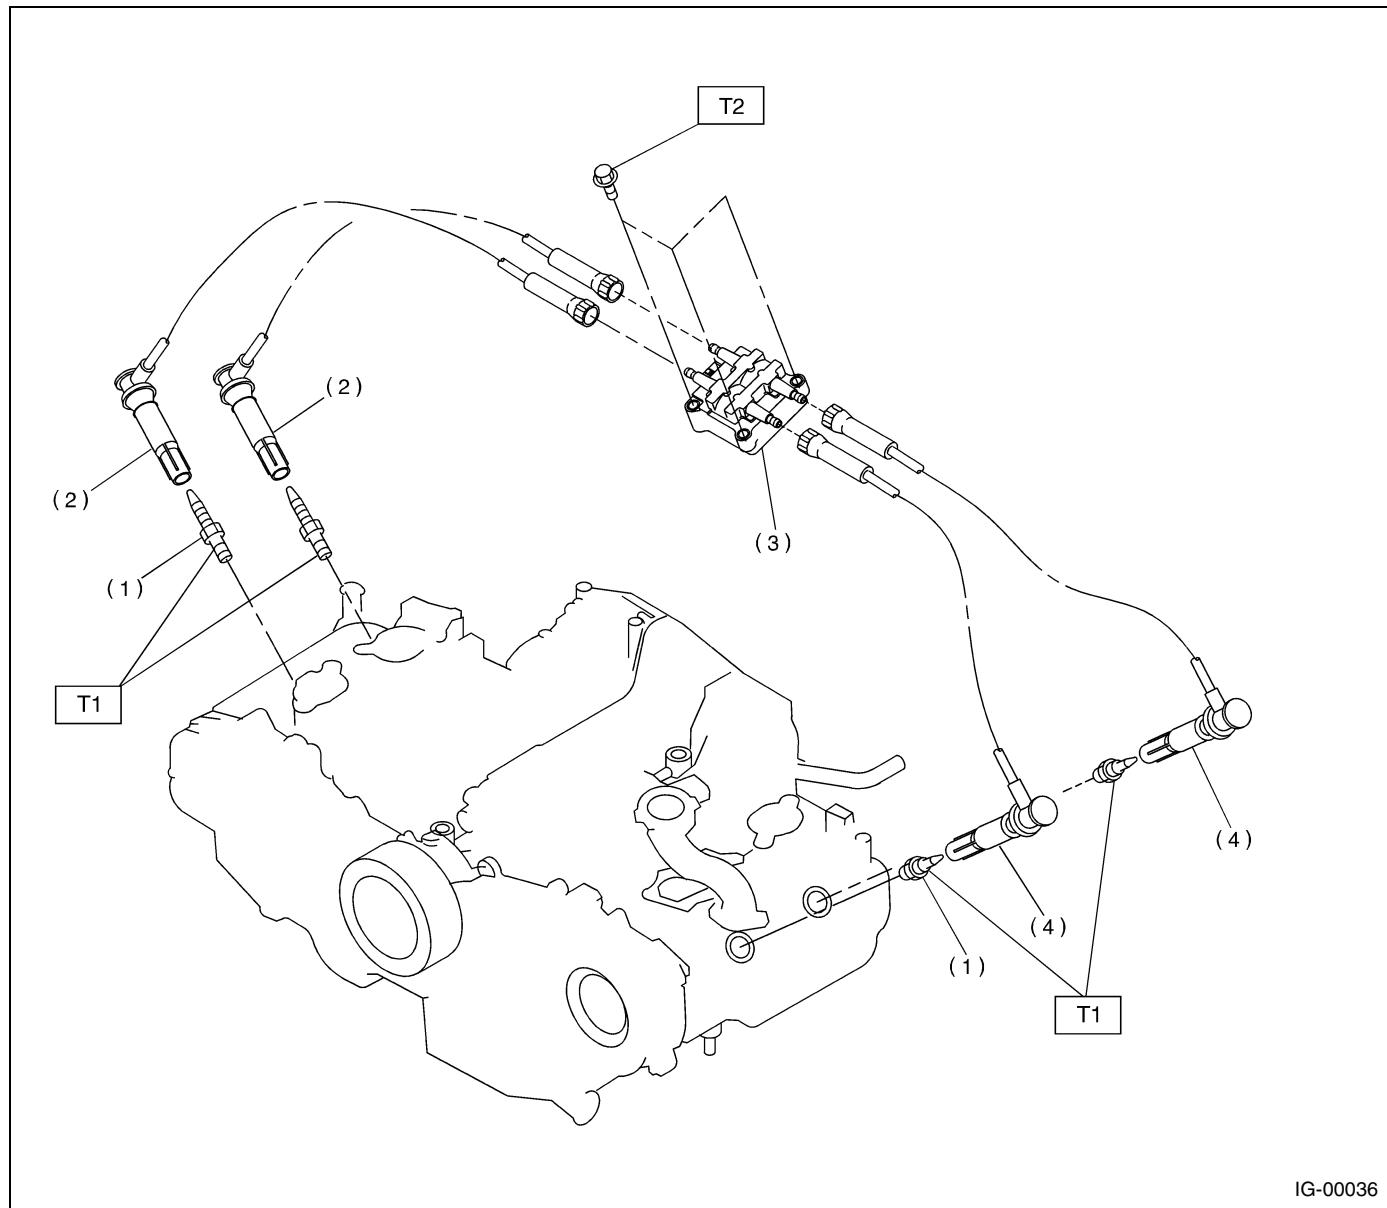

IG-00036

(1) Spark plug

(4) Spark plug cord (#2, #4)

Tightening torque: N·m (kgf·m, ft·lb)

(2) Spark plug cord (#1, #3)

T1: 21 (2.1, 15.2)

(3) Ignition coil and ignitor assembly

T2: 6.4 (0.65, 4.7)

GENERAL DESCRIPTION

IGNITION

C: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.