


3. Air Cleaner Case


A: REMOVAL

- 1) Disconnect the ground cable from battery.

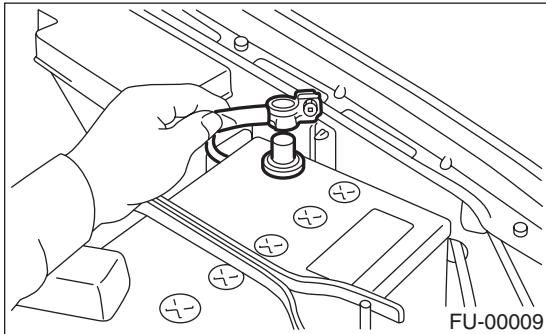


- 2) Disconnect the connector (A) of intake air temperature sensor.

- 3) Remove bolts (B) which install air cleaner case to stay.

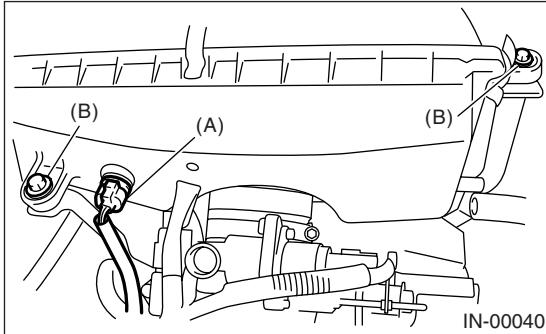

- 4) Disconnect the hoses and intake duct from air cleaner case.

- 5) Loosen the clamp which connects air cleaner case to throttle body.

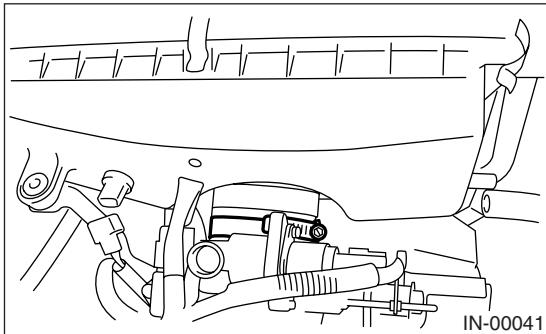

- 6) Remove the air cleaner case.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

For tightening torques, refer to "COMPONENT".

<Ref. to IN(H4SO)-2, COMPONENT, General Description.>

C: INSPECTION

Inspect for cracks and loose connections.