



4. Air Intake Duct

A: REMOVAL


- 1) Remove the bolt which installs air intake duct A on the front side of body.

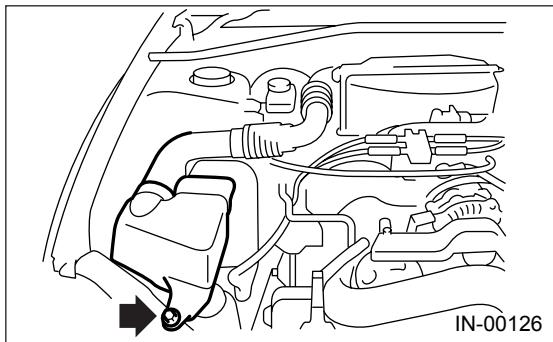

- 2) Remove the bolt which installs air intake duct B on the body.

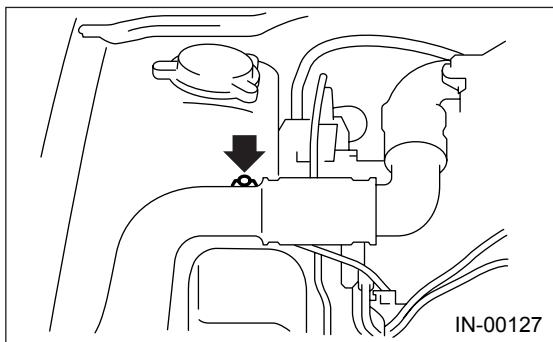

- 3) Remove the air intake duct as a unit.

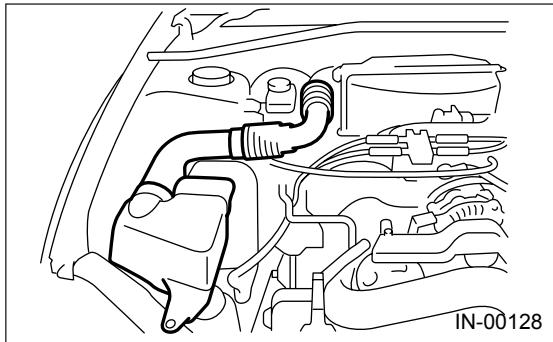

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

For tightening torques, refer to "COMPONENT".
<Ref. to IN(H4SO)-2, COMPONENT, General Description.>

C: INSPECTION

- 1) Inspect for cracks and loose connections.
- 2) Inspect that no foreign objects are mixed in the air intake duct.