

10. Engine Mounting

A: REMOVAL

- 1) Remove the engine assembly. <Ref. to ME(H4SO)-33, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from engine assembly.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Engine mounting:

34 N·m (3.5 kgf·m, 25.3 ft-lb)

C: INSPECTION

Make sure that no cracks or other damage exists.