

# GENERAL DESCRIPTION


## SPEED CONTROL SYSTEMS

### 1. General Description

#### A: SPECIFICATIONS

Accelerator pedal	Free play At pedal pad	0 — 4 mm (0 — 0.16 in)
	Stroke At pedal pad	52 — 57 mm (2.05 — 2.24 in)

#### B: COMPONENT

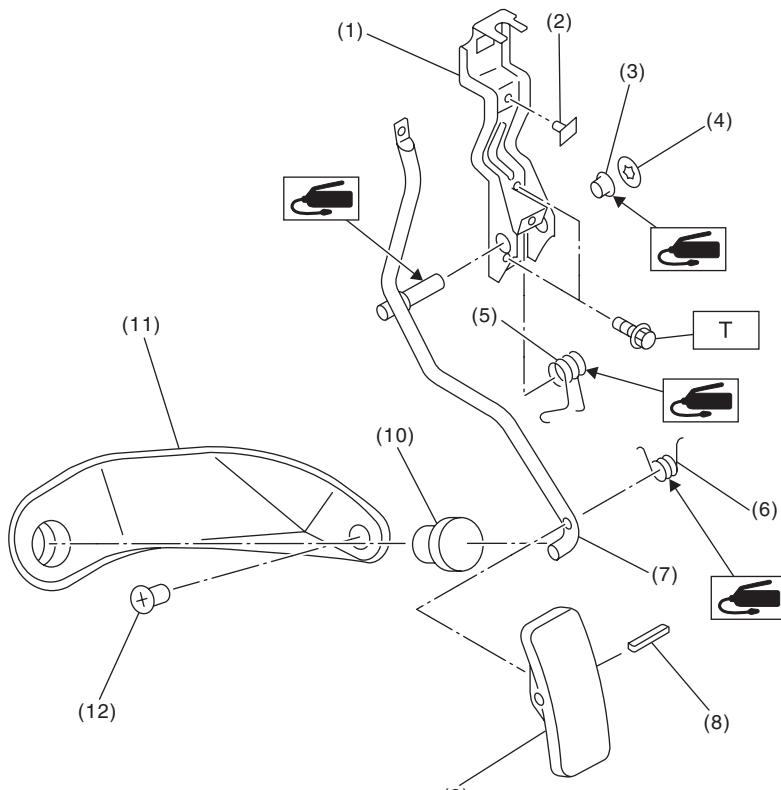

SP-00015

(1) Accelerator bracket

(6) Accelerator pedal spring

(11) Accelerator plate

(2) Stopper

(7) Accelerator pedal lever

(12) Clip

(3) Bushing

(8) Spring pin

(4) Clip

(9) Accelerator pedal

**Tightening torque: N·m (kgf·m, ft·lb)**

(5) Accelerator spring

(10) Accelerator stopper

**T: 18 (1.8, 13.0)**

#### C: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.

- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.