

## 3. Accelerator Control Cable

### A: REMOVAL

- 1) Remove the accelerator pedal. <Ref. to SP(H4SO)-3, REMOVAL, Accelerator Pedal.>
- 2) Separate the accelerator cable and accelerator pedal.

### B: INSTALLATION

- 1) Install in the reverse order of removal.

NOTE:


- If the cable clamp is damaged, replace it with a new one.
- Never fail to cover the outer cable end with boot.
- Be careful not to kink the accelerator cable.
- Do not apply grease to the throttle cable on engine side.
- Grease should not be applied to places other than specified.

- 2) Apply grease to the throttle cable end at the engine side.

**Grease:**

**Parts No. 004404002**

**Slicolube G-30M**

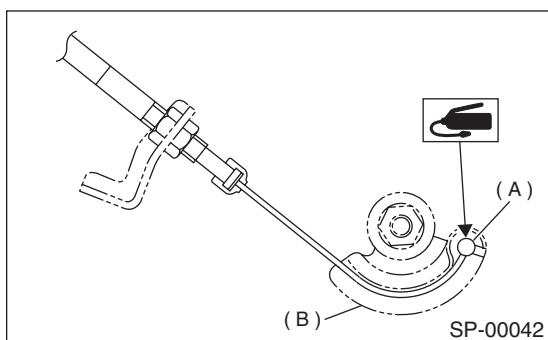

- 3) Install the pedal and then adjust it. <Ref. to SP(H4SO)-5, ADJUSTMENT, Accelerator Pedal.>

### C: INSPECTION

- 1) Make sure the inner cable is not twisted or frayed.
- 2) Make sure the outer cable is not cracked.