


# FUEL TANK SENSOR CONTROL VALVE

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

## 11. Fuel Tank Sensor Control Valve


### A: REMOVAL

- 1) Remove the fuel tank. <Ref. to FU(H4DOTC)-55, REMOVAL, Fuel Tank.>
- 2) Remove the protector cover.

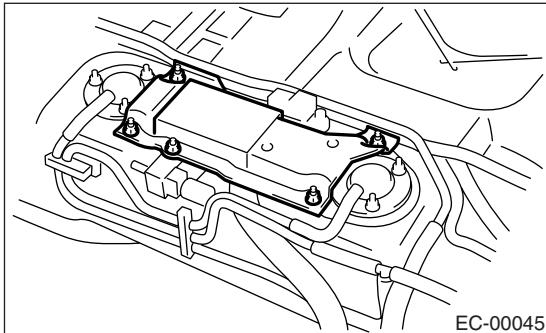

EC-00045

- 3) Disconnect the connector from fuel tank sensor control valve.
- 4) Disconnect hose and remove fuel tank sensor control valve.

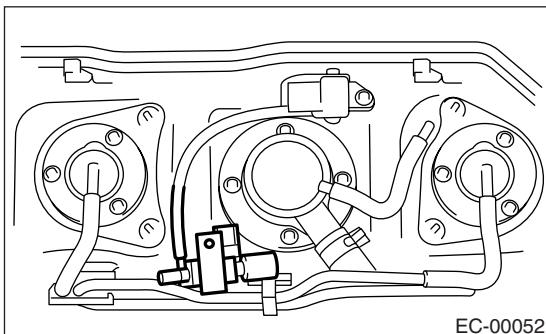

EC-00052


### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

T1: 7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

T2: 4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

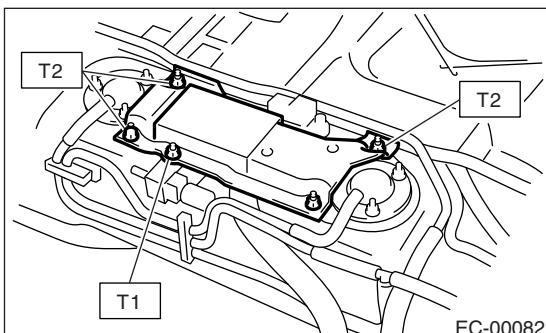

EC-00082

### C: INSPECTION

Make sure the hoses are not cracked or loose.