


## VENT VALVE

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


### 14.Vent Valve

#### A: REMOVAL


- 1) Remove the fuel tank. <Ref. to FU(H4DOTC)-55, REMOVAL, Fuel Tank.>
- 2) Remove the protector cover.

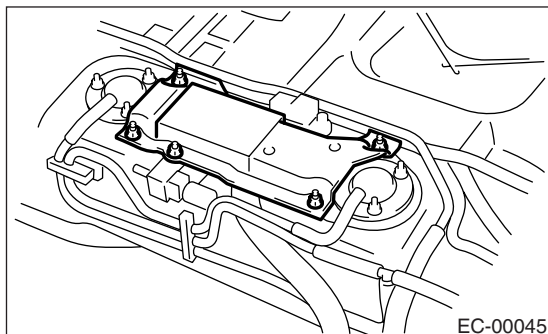

- 3) Remove the clips, and disconnect the hoses from vent valve.

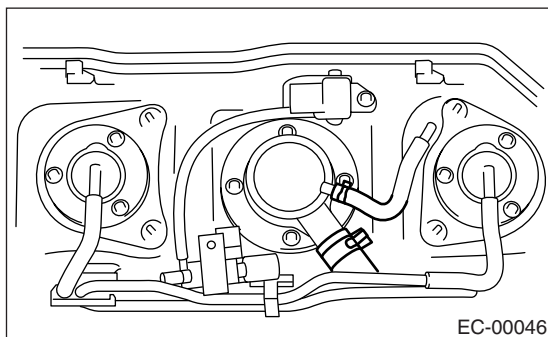

- 4) Remove the nuts and then remove the vent valve.

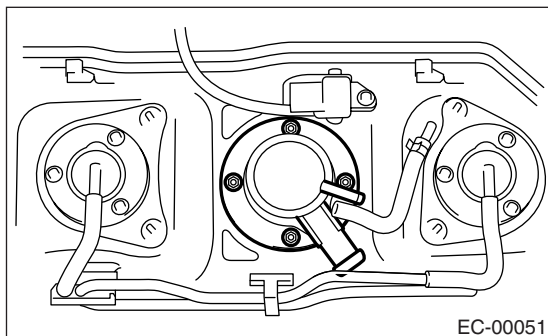

#### B: INSTALLATION


Install in the reverse order of removal.

#### CAUTION:

Replace the rubber seat with a new one.

**Tightening torque:**

**T: 4.4 N·m (0.45 kgf-m, 3.3 ft-lb)**

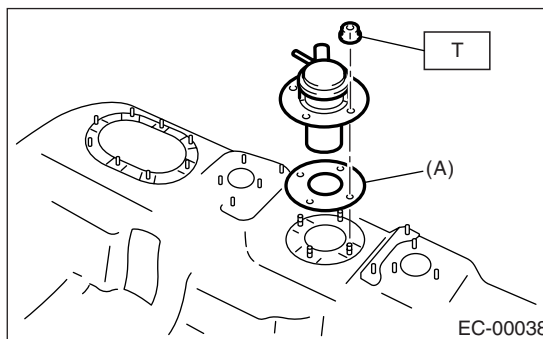


(A) Rubber seat

**Tightening torque:**

**T1: 7.4 N·m (0.75 kgf-m, 5.4 ft-lb)**

**T2: 4.4 N·m (0.45 kgf-m, 3.3 ft-lb)**

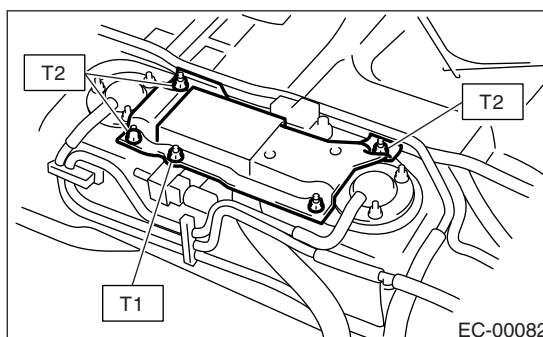

#### C: INSPECTION

Make sure the hoses are not cracked or loose.