


### 4. Precatalytic Converter

#### A: REMOVAL

Precatalytic converter (A) is built in the joint pipe. Refer to the removal of joint pipe for removal procedure. <Ref. to EX(H4DOTC)-12, REMOVAL, Joint Pipe.>

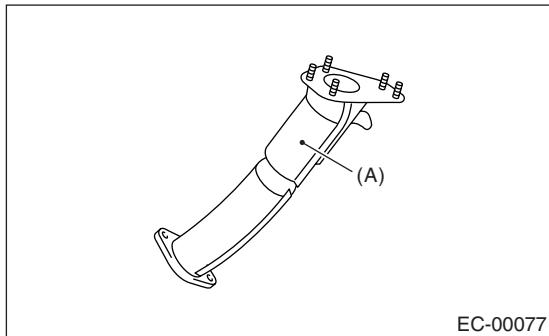

#### B: INSTALLATION

Precatalytic converter is built in the joint pipe. Refer to the installation of joint pipe for installation procedure. <Ref. to EX(H4DOTC)-12, INSTALLATION, Joint Pipe.>

#### C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.