

MAIN FUEL LEVEL SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

7. Main Fuel Level Sensor

A: REMOVAL

For work procedures, refer to “FU(H4DOTC)” section. <Ref. to FU(H4DOTC)-65, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

For work procedures, refer to “FU(H4DOTC)” section.

<Ref. to FU(H4DOTC)-65, INSTALLATION, Fuel Level Sensor.>