



8. Fuel Temperature Sensor

A: REMOVAL

- 1) Remove the fuel pump assembly. <Ref. to FU(H4DOTC)-63, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from fuel pump bracket.

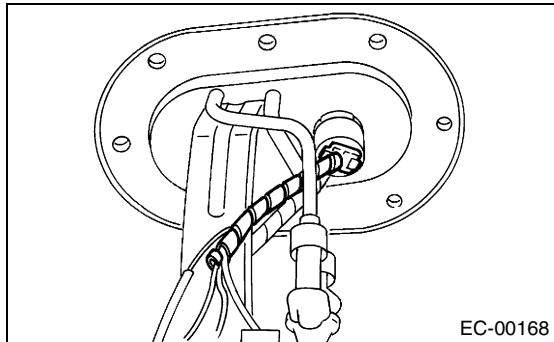

- 3) Remove the main fuel level sensor from fuel pump assembly. <Ref. to FU(H4DOTC)-65, REMOVAL, Fuel Level Sensor.>

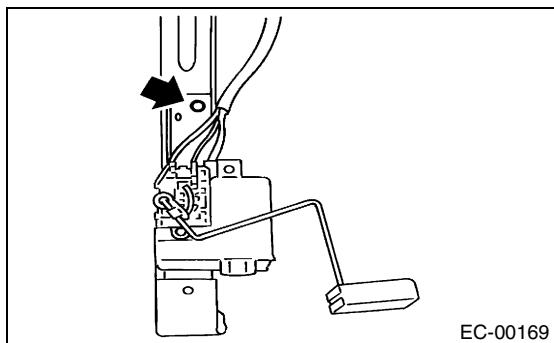

NOTE:

Fuel temperature sensor is a unit with the fuel pump. If replacing it, replace as a fuel pump.

B: INSTALLATION

Install in the reverse order of removal.

WARNING:

Spark may occur and ignite if fuel is nearby.