

11. Read Diagnostic Trouble Code

A: OPERATION

1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after the engine type information is displayed.
- 4) On the «Engine Diagnosis» display screen, select {Diagnostic Code(s) Display} and press the [YES] key.
- 5) On the «Diagnostic Code(s) Display» display screen, select {Current Diagnostic Code(s)} or {History Diagnostic Code(s)} and press the [YES] key.

NOTE:

- For detailed operation procedures, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
- For details concerning diagnostic trouble codes (DTCs), refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to EN(H4DOTC)-81, List of Diagnostic Trouble Codes (DTC).>

2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu» display screen, select {2. Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after the engine type information is displayed.
- 4) On the «Engine Diagnosis» display screen, select {OBD System} and press the [YES] key.
- 5) On the «OBD Menu» display screen, select {Diagnosis Code(s) Display} and press the [YES] key.
- 6) Make sure that a diagnostic trouble code (DTC) is shown on the display screen.

NOTE:

- For detailed operation procedures, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
- For details concerning diagnostic trouble codes (DTCs), refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to EN(H4DOTC)-81, List of Diagnostic Trouble Codes (DTC).>

3. OBD-II GENERAL SCAN TOOL

Refers to data denoting emission-related power train diagnostic trouble codes (DTC).

For details concerning diagnostic trouble codes (DTCs), refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to EN(H4DOTC)-81, List of Diagnostic Trouble Codes (DTC).>

NOTE:

Refer to OBD-II general scan tool manufacturer's instruction manual to access emission-related power train diagnostic trouble codes (DTC) (MODE \$03).