


## 5. Rear Exhaust Pipe

### A: REMOVAL

- 1) Disconnect the ground terminal from battery.

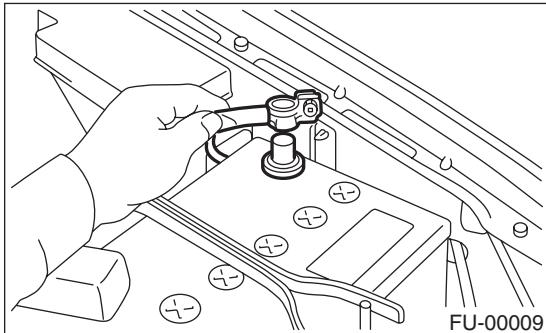


- 2) Lift up the vehicle.

- 3) Separate the rear exhaust pipe from center exhaust pipe.

**CAUTION:**


Be careful, the exhaust pipe is hot.

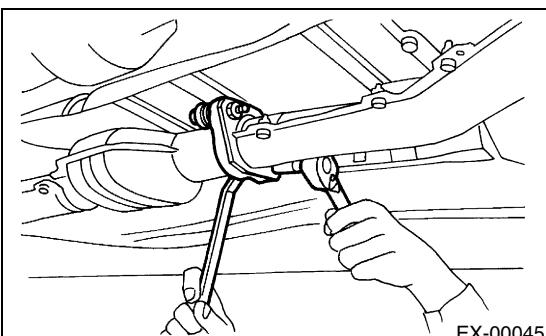

- 4) Separate the rear exhaust pipe from muffler.

**CAUTION:**

Be careful not to pull down the rear exhaust pipe.

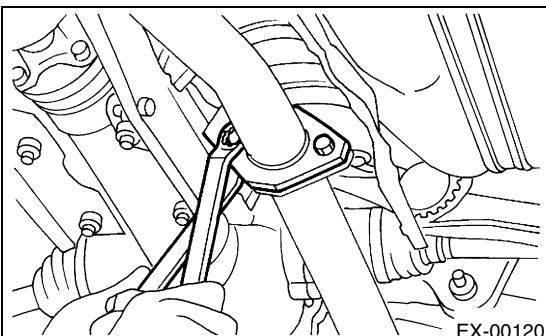

- 5) Remove the rear exhaust pipe.

### B: INSTALLATION


**CAUTION:**

Replace the gaskets with new ones.

- 1) Install the rear exhaust pipe to muffler.

**Tightening torque:**


48 N·m (4.9 kgf-m, 35.4 ft-lb)

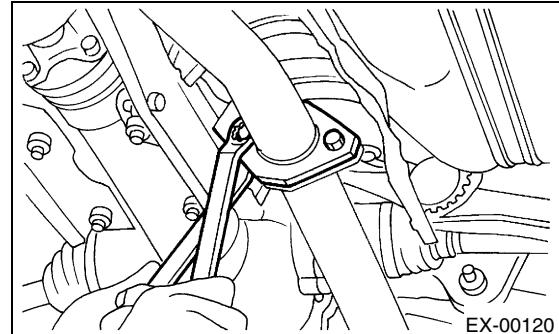

- 2) Install the rear exhaust pipe to center exhaust pipe.


**Tightening torque:**

18 N·m (1.8 kgf-m, 13.0 ft-lb)

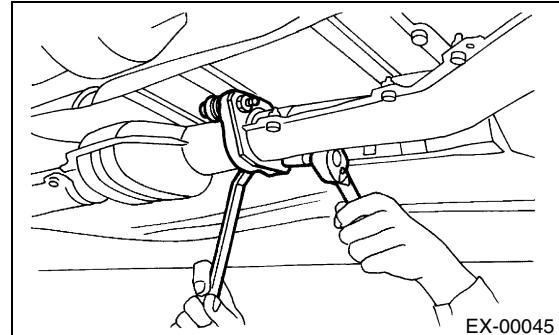

- 3) Lower the vehicle.

- 4) Connect the battery ground terminal to battery.

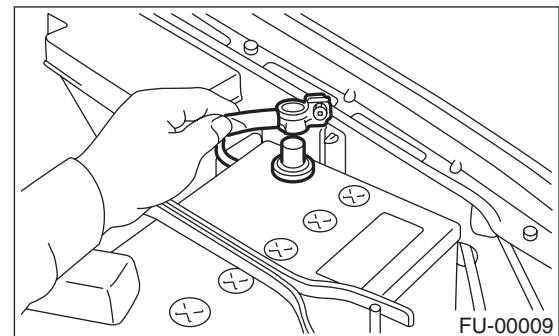

### C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.
- 3) Make sure the cushion rubber is not worn or cracked.