


### 6. Muffler

#### A: REMOVAL

1) Separate the muffler from rear exhaust pipe.

**CAUTION:**

Be careful, the exhaust pipe is hot.

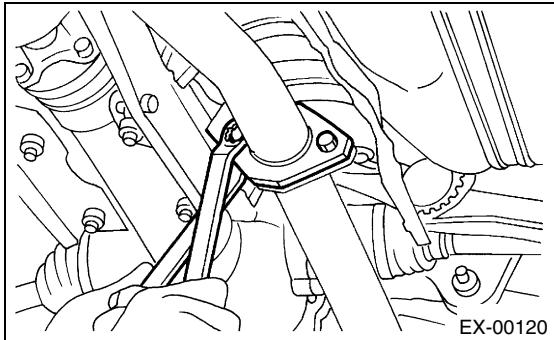

2) Remove the rubber cushions, and detach muffler.


**CAUTION:**

Be careful not to drop the muffler during removal.

**NOTE:**

To facilitate removal, apply a coat of SUBARU CRC to the mating area of rubber cushions in advance.

**SUBARU CRC (Part No. 004301003)**

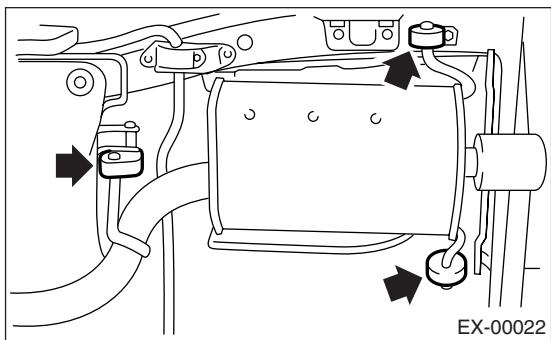

#### B: INSTALLATION


1) Install in the reverse order of removal.

**CAUTION:**

Replace the gasket with a new one.

**Tightening torque:**

48 N·m (4.9 kgf·m, 35.4 ft-lb)

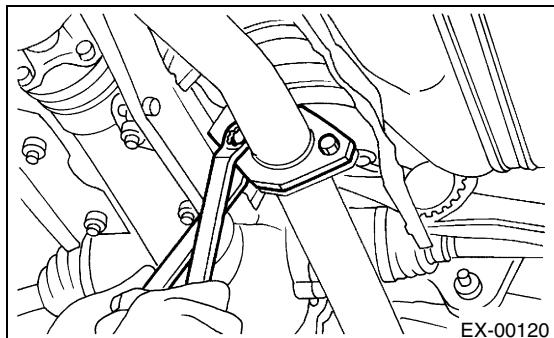

#### C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.
- 3) Make sure the cushion rubber is not worn or cracked.