


## 10. Pressure Sensor


### A: REMOVAL

- 1) Disconnect the battery ground cable.

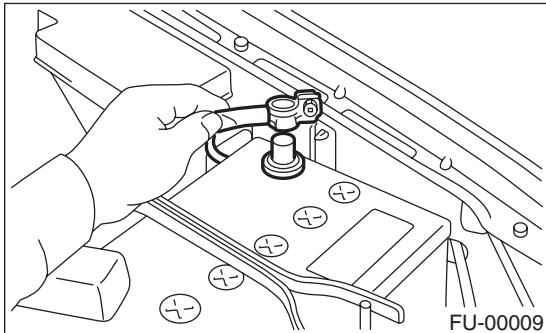

- 2) Remove the idle air control solenoid valve. <Ref. to FU(H4DOTC)-36, REMOVAL, Idle Air Control Solenoid Valve.>

- 3) Disconnect the connectors from pressure sensor.

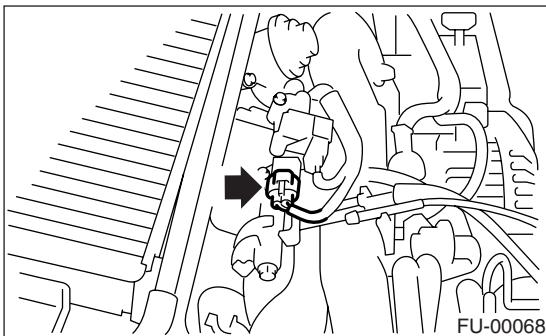

- 4) Remove the pressure sensor from the throttle body.

### B: INSTALLATION

Install in the reverse order of removal.

**NOTE:**

Replace the O-ring for the pressure sensor with new ones.

**Tightening torque:**

$1.6 \text{ N}\cdot\text{m} (0.16 \text{ kgf}\cdot\text{m}, 1.2 \text{ ft-lb})$