


IDLE AIR CONTROL SOLENOID VALVE

FUEL INJECTION (FUEL SYSTEMS)


11.Idle Air Control Solenoid Valve

A: REMOVAL


- 1) Disconnect the battery ground cable.

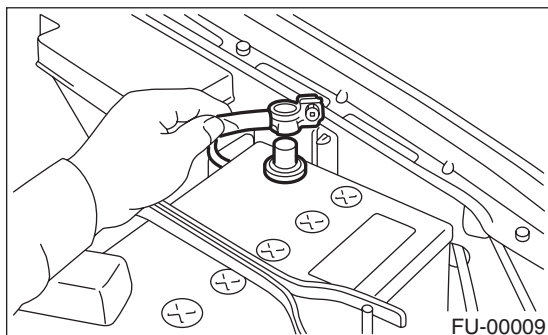


- 2) Disconnect the connector from the idle air control solenoid valve.

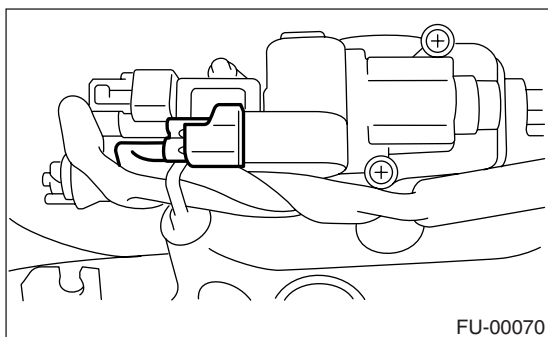

- 3) Remove the idle air control solenoid valve from the throttle body.

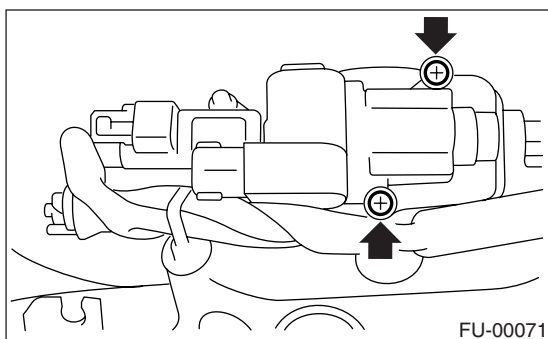

- 4) Remove the gasket from throttle body.

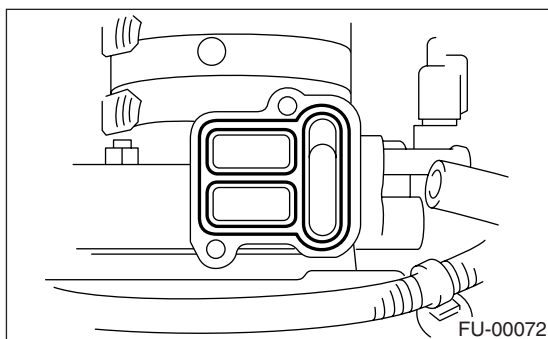

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Always use a new gasket.

Tightening torque:

2.8 N·m (0.29 kgf-m, 2.1 ft-lb)

