

15.Tumble Generator Valve Position Sensor

A: SPECIFICATIONS

Never remove the tumble generator valve position sensor from the tumble generator valve assembly. If removed, it cannot be calibrated.

For Removal and Installation, refer to "Tumble Generator Valve Assembly".<Ref. to FU(H4DOTC)-41, REMOVAL, Tumble Generator Valve Assembly.><Ref. to FU(H4DOTC)-41, INSTALLATION, Tumble Generator Valve Assembly.>