


WASTEGATE CONTROL SOLENOID VALVE

FUEL INJECTION (FUEL SYSTEMS)


16. Wastegate Control Solenoid Valve

A: REMOVAL

- 1) Disconnect the battery ground cable.

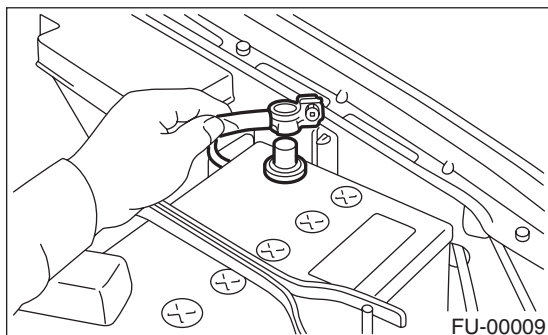


- 2) Remove the solenoid valve cover.

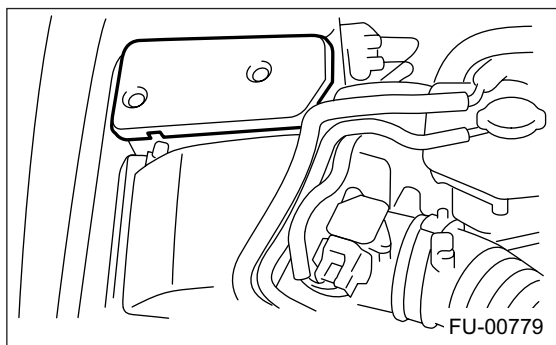


- 3) Disconnect the connector (A) from the wastegate control solenoid valve.

- 4) Disconnect the pressure hoses (B) from the wastegate control solenoid valve.

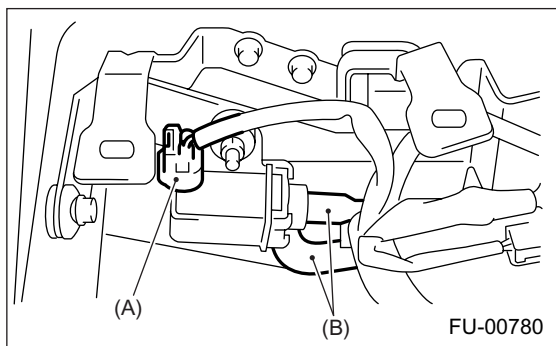

- 5) Remove the wastegate control solenoid valve from the bracket.

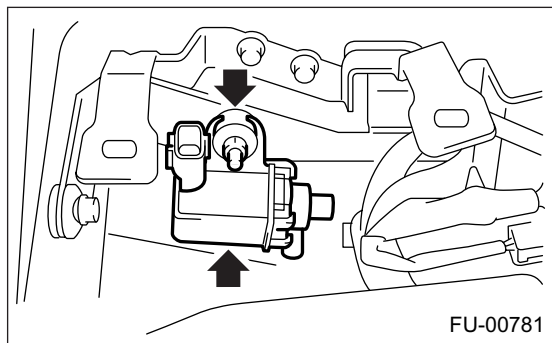

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

