



2. Throttle Body

A: REMOVAL


- 1) Disconnect the battery ground cable.

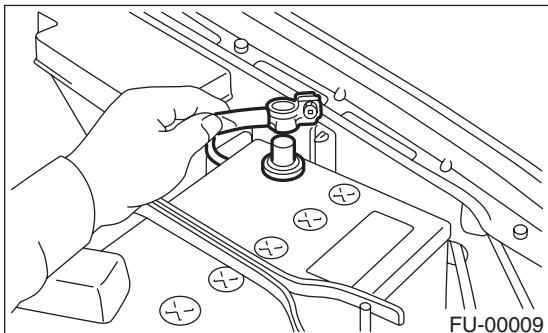


- 2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
- 3) Disconnect the connector from the throttle position sensor (A) and idle air control solenoid valve (B) and pressure sensor (C).

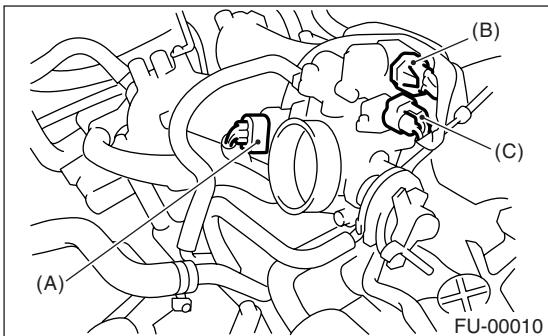

- 4) Disconnect the accelerator cable.

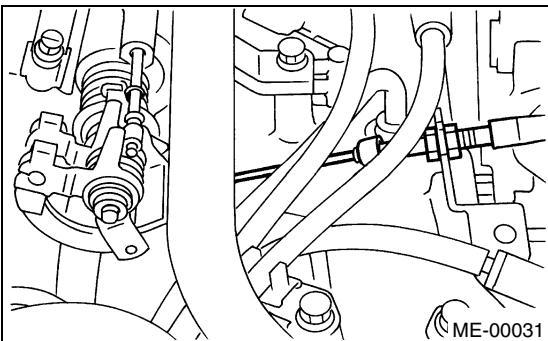

- 5) Disconnect the engine coolant hoses from the throttle body.

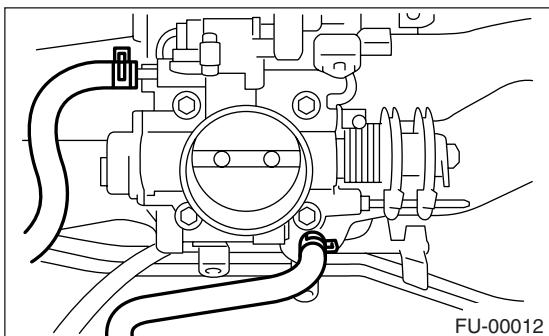

- 6) Remove the bolts which secure the throttle body to intake manifold.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Always use a new gasket.

Tightening torque:

22 N·m (2.2 kgf·m, 15.9 ft-lb)

