


### 20. Engine Control Module

#### A: REMOVAL


- 1) Disconnect the battery ground cable.

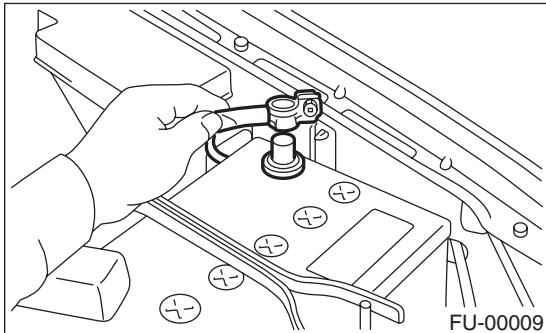

- 2) Remove the lower inner trim of the passenger side.


<Ref. to EI-47, REMOVAL, Lower Inner Trim.>

- 3) Detach the floor mat of the front passenger seat.
- 4) Remove the protect cover.

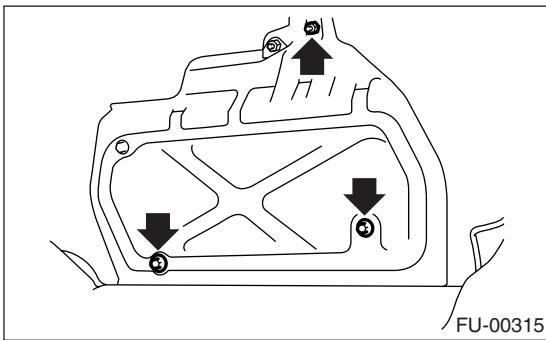

- 5) Remove the nuts (A) which hold ECM to the bracket.

- 6) Remove the clip (B) from the bracket.

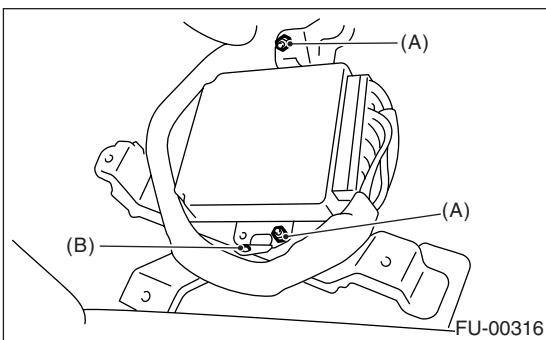

- 7) Disconnect the ECM connectors and take out the ECM.

#### B: INSTALLATION

Install in the reverse order of removal.

##### CAUTION:

When replacing ECM, be careful not to use the wrong spec. ECM to avoid any damage to the fuel injection system.