



21. Main Relay

A: REMOVAL

- 1) Disconnect the battery ground cable.

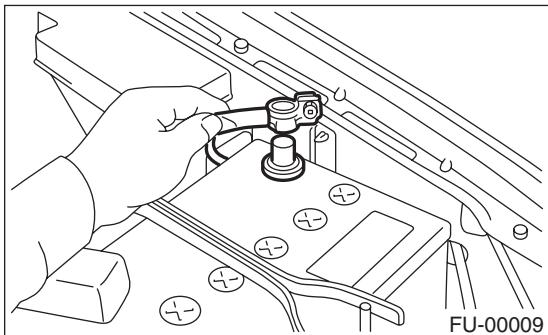

- 2) Remove the passenger's side front side sill cover.
- 3) Remove the bolt which holds the main relay bracket on the body.
- 4) Disconnect the connectors from the main relay.

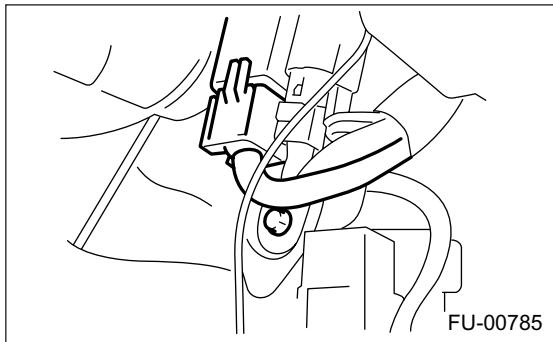

B: INSTALLATION

Install in the reverse order of removal.