



23. Fuel Pump Controller

A: REMOVAL


- 1) Disconnect the battery ground cable.

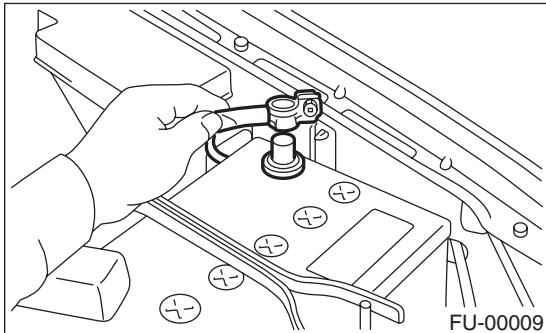

- 2) Remove the rear quarter trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the connector from the fuel pump control unit.

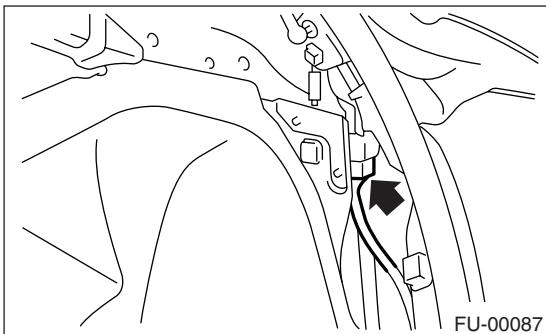

- 4) Remove the fuel pump control unit.

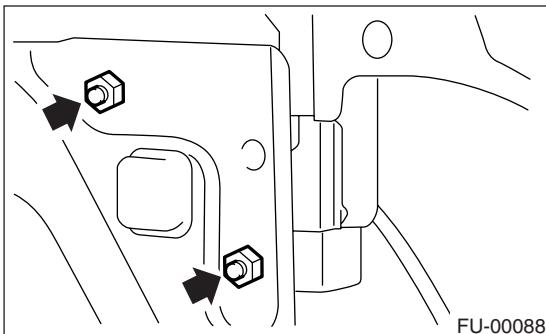

B: INSTALLATION

Install in the reverse order of removal.