

## 28. Fuel Level Sensor

### A: REMOVAL


**WARNING:**

- Place "NO FIRE" signs near the working area.
- Be careful not to spill fuel on the floor.


**NOTE:**

Fuel level sensor is built in fuel pump assembly.

- 1) Remove the fuel pump assembly. <Ref. to FU(H4DOTC)-63, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from the fuel pump bracket.

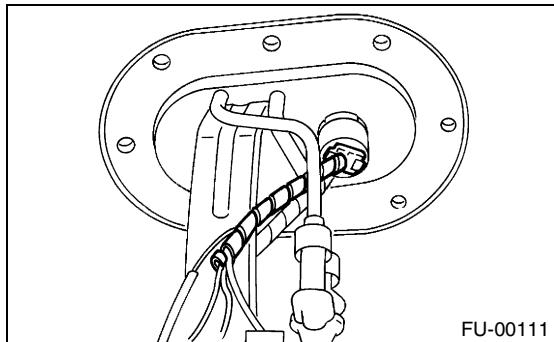

- 3) Remove the bolt which installs the fuel level sensor on mounting bracket.

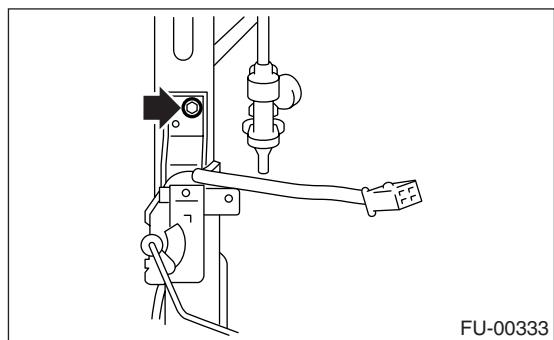

### B: INSTALLATION

Install in the reverse order of removal.