

FUEL SUB LEVEL SENSOR

FUEL INJECTION (FUEL SYSTEMS)


29. Fuel Sub Level Sensor

A: REMOVAL

WARNING:


- Place "NO FIRE" signs near the working area.
- Be careful not to spill fuel on the floor.

1) Disconnect the battery ground cable.

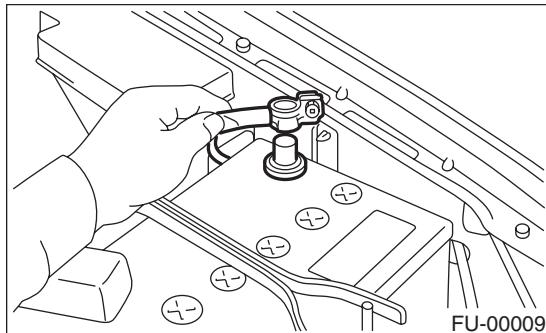

2) Lift-up the vehicle.


3) Drain the fuel from the fuel tank. Set a container under the vehicle and remove drain plug from fuel tank.

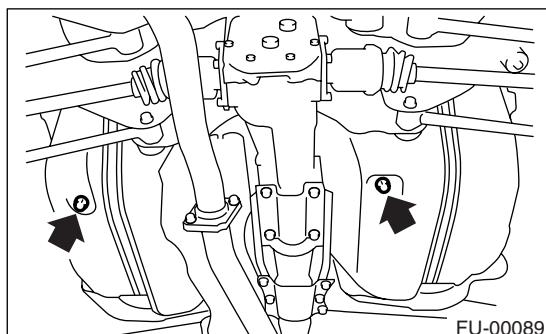

4) Tighten the fuel drain plug.


Tightening torque:

26 N·m (2.65 kgf·m, 19.2 ft-lb)

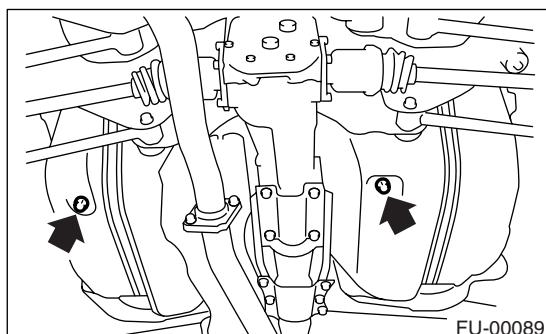


5) Remove the rear seat.

6) Remove the service hole cover.

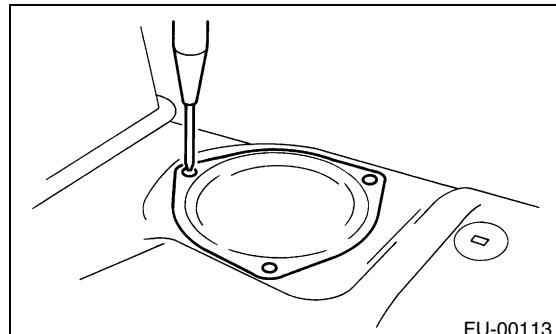


7) Disconnect the connector from the fuel sub meter.


8) Disconnect the fuel jet pump hose.

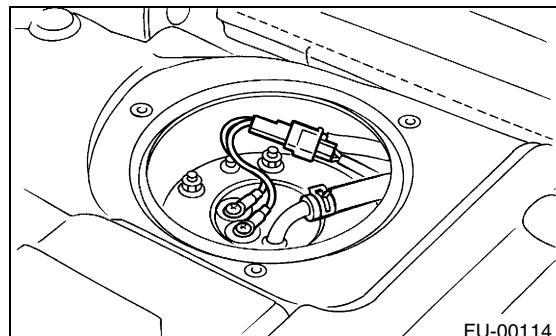

9) Remove the bolts which install the fuel sub meter unit on fuel tank.

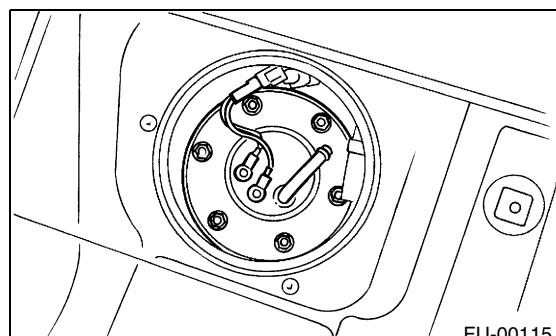

10) Remove the fuel sub meter unit.

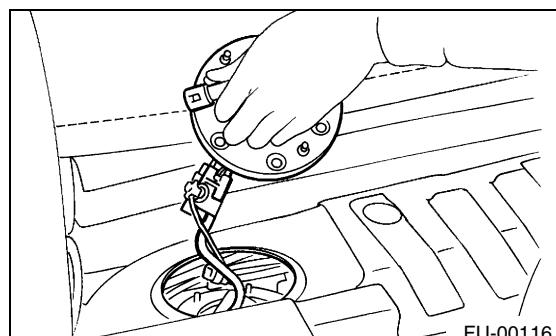

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.3 ft-lb)

