



4. Engine Coolant Temperature Sensor

A: REMOVAL

- 1) Disconnect the battery ground cable.

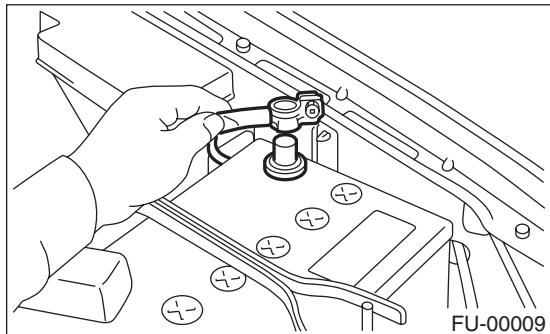

- 2) Remove the generator <Ref. to SC(H4SO)-13, REMOVAL, Generator.>
- 3) Drain the coolant.<Ref. to CO(H4SO)-29, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 4) Disconnect the connector from the engine coolant temperature sensor.

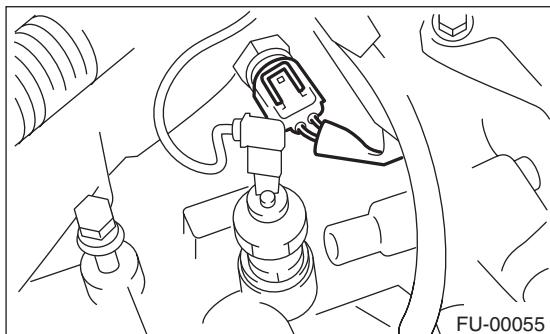

- 5) Remove the engine coolant temperature sensor.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

$18 \text{ N}\cdot\text{m} (1.8 \text{ kgf-m}, 13.3 \text{ ft-lb})$