


CRANKSHAFT POSITION SENSOR

FUEL INJECTION (FUEL SYSTEMS)


5. Crankshaft Position Sensor

A: REMOVAL


- 1) Disconnect the battery ground cable.

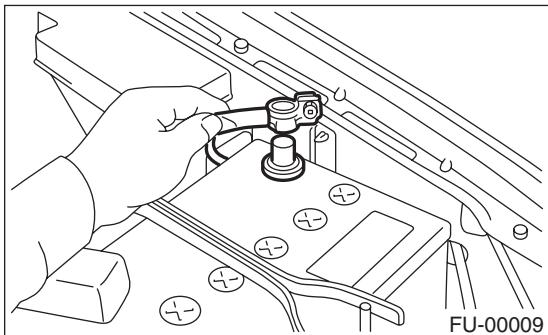

- 2) Remove the bolt which install the crankshaft position sensor to cylinder block.

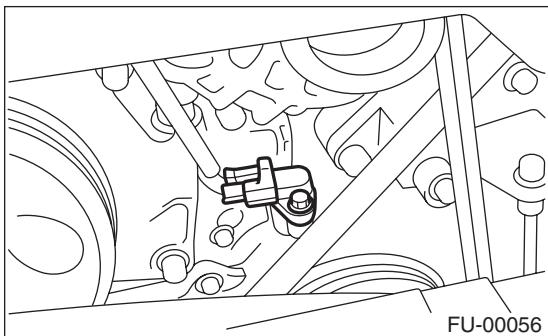

- 3) Remove the crankshaft position sensor, and disconnect the connector from it.

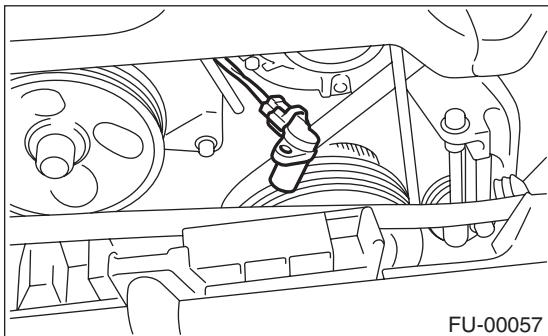

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

T: 6.4 N·m (0.65 kgf·m, 4.7 ft-lb)

