


CAMSHAFT POSITION SENSOR

FUEL INJECTION (FUEL SYSTEMS)


6. Camshaft Position Sensor

A: REMOVAL


1) Disconnect the battery ground cable.

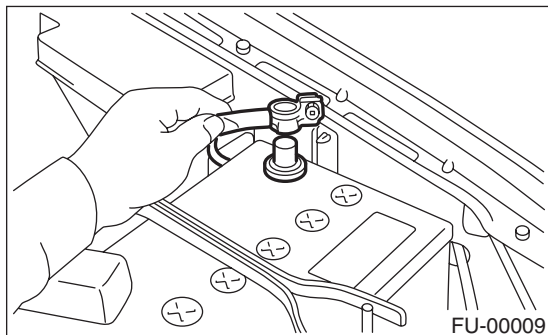

2) Disconnect the connector from the camshaft position sensor.

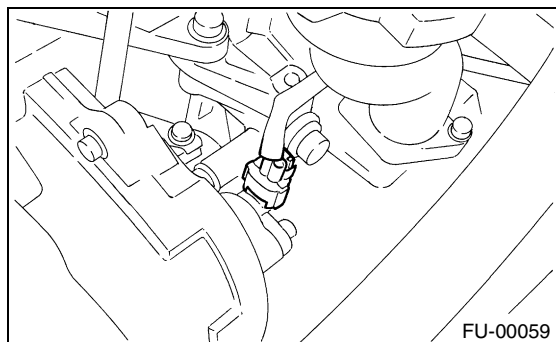

3) Remove the camshaft position sensor from the camshaft support LH.

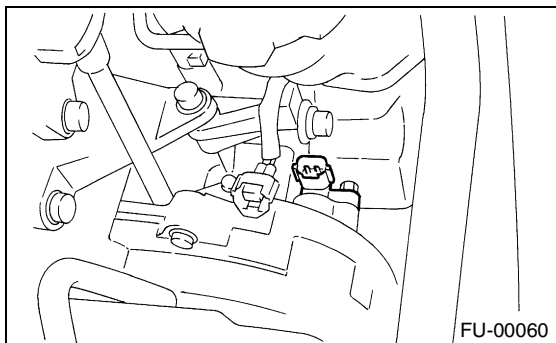

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

T: 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

