


## 8. Throttle Position Sensor


### A: REMOVAL

- 1) Disconnect the battery ground cable.

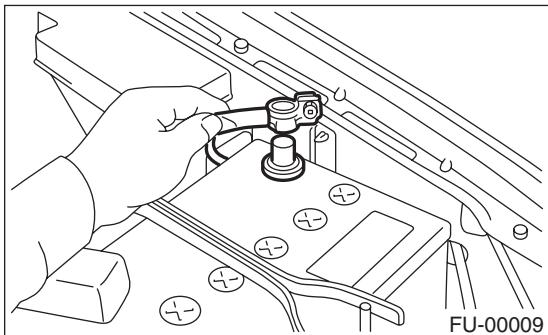


- 2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>

- 3) Disconnect the connector from the throttle position sensor.

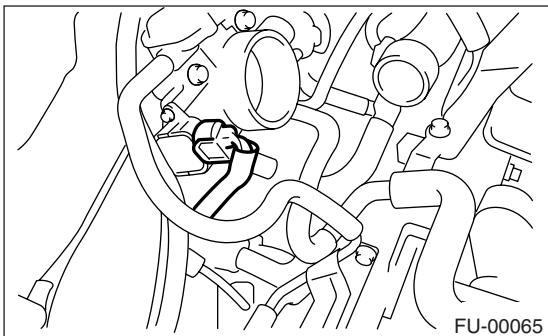

- 4) Remove the throttle position sensor holding screws, and remove it.

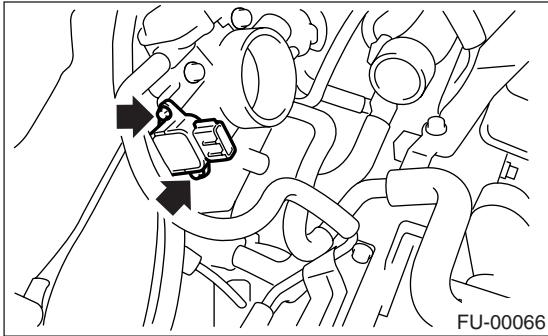

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

$1.6 \text{ N}\cdot\text{m}$  (0.16 kgf-m, 1.2 ft-lb)

