

### 3. Ignition Coil and Ignitor Assembly

#### A: REMOVAL

Direct ignition type has been adopted.

Refer to the "Spark Plug Removal" for removal procedure. <Ref. to IG(H4DOTC)-4, REMOVAL, Spark Plug.>

#### B: INSTALLATION

Install in the reverse order of removal.

*Tightening torque:*

**16 N·m (1.63 kgf·m, 11.8 ft-lb)**

#### C: INSPECTION

Ignitor is integrated with the coil. Therefore resistance cannot be measured.