



### 4. Intake Duct

#### A: REMOVAL

- 1) Disconnect the ground terminal from battery.

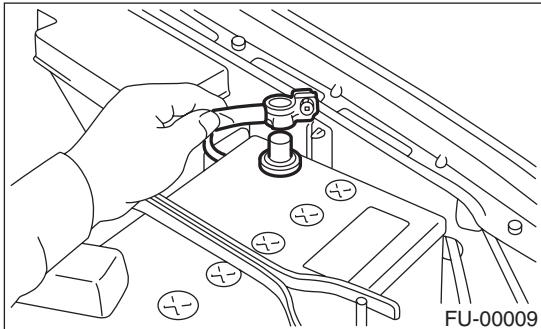

- 2) Remove the intake manifold. <Ref. to FU(H4DOTC)-15, REMOVAL, Intake Manifold.>
- 3) Remove the sensor, engine harness, and fuel pipe attached to the intake manifold. <Ref. to FU(H4DOTC)-21, DISASSEMBLY, Intake Manifold.>
- 4) Remove the intake duct from intake manifold.

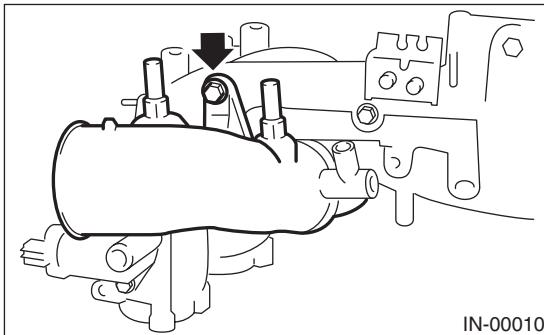

#### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

***19 N·m (1.9 kgf·m, 13.7 ft-lb)***

