


# AIR BY-PASS VALVE

## INTAKE (INDUCTION)

### 7. Air By-pass Valve

#### A: REMOVAL

- 1) Remove the air by-pass valve from intercooler.

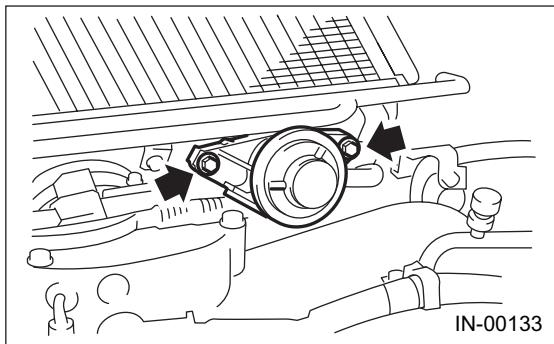

- 2) Disconnect the air by-pass hoses from air by-pass valve.

#### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

***16 N·m (1.6 kgf-m, 11.7 ft-lb)***

