

## 10. Engine Mounting

### A: REMOVAL

- 1) Remove the engine assembly. <Ref. to ME(H4DOTC)-32, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from engine assembly.

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

***Engine mounting;***

***34 N·m (3.5 kgf-m, 25.3 ft-lb)***

### C: INSPECTION

Make sure there are no cracks or other damage.