


14. Belt Cover

A: REMOVAL

- 1) Remove the V-belt. <Ref. to ME(H4DOTC)-44, REMOVAL, V-belt.>
- 2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove the left-hand belt cover (A).
- 4) Remove the right-hand belt cover (B).
- 5) Remove the front belt cover (C).

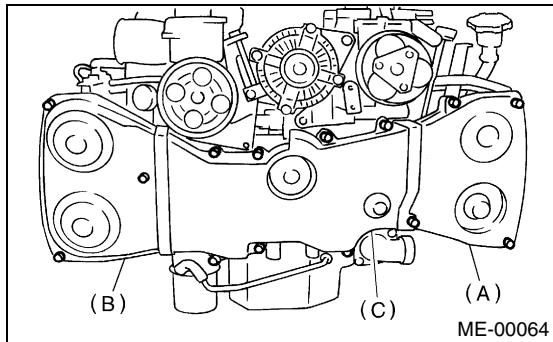

B: INSTALLATION

- 1) Install the front belt cover (C).

Tightening torque:

5 N·m (0.5 kgf·m, 3.6 ft-lb)

- 2) Install the right-hand belt cover (B).


Tightening torque:

5 N·m (0.5 kgf·m, 3.6 ft-lb)

- 3) Install the left-hand belt cover (A).

Tightening torque:

5 N·m (0.5 kgf·m, 3.6 ft-lb)

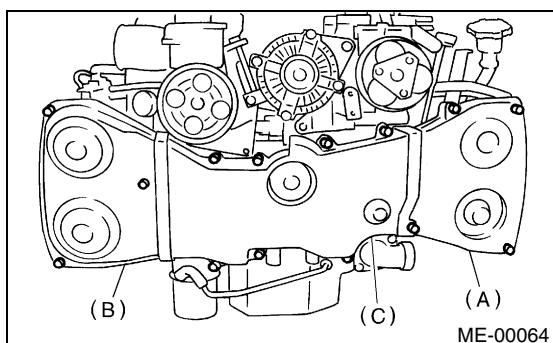

- 4) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-46, INSTALLATION, Crankshaft Pulley.>
- 5) Install the V-belt. <Ref. to ME(H4DOTC)-44, INSTALLATION, V-belt.>

C: INSPECTION

Make sure the cover is not damaged.