


16.Camshaft Sprocket

A: REMOVAL

- 1) Remove the V-belt. <Ref. to ME(H4DOTC)-44, REMOVAL, V-belt.>
- 2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove the belt cover. <Ref. to ME(H4DOTC)-47, REMOVAL, Belt Cover.>
- 4) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-48, REMOVAL, Timing Belt Assembly.>
- 5) Remove the camshaft position sensor. <Ref. to FU(H4DOTC)-31, REMOVAL, Camshaft Position Sensor.>
- 6) Remove the camshaft sprockets. To lock the camshaft, use ST.

ST 18231AA010 CAMSHAFT SPROCKET WRENCH (Intake LH)
 ST 499207400 CAMSHAFT SPROCKET WRENCH (Except intake LH)

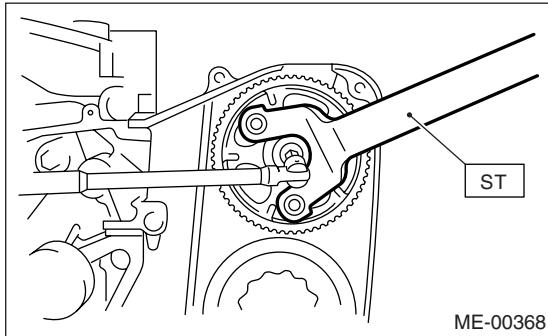

B: INSTALLATION

- 1) Install the camshaft sprocket No. 1. and No. 2. To lock camshaft, use ST.


ST 18231AA010 CAMSHAFT SPROCKET WRENCH (Intake LH)
 ST 499207400 CAMSHAFT SPROCKET WRENCH (Except intake LH)

Tightening torque:

98 N·m (10 kgf-m, 72.4 ft-lb)

CAUTION:

Do not confuse left and right side intake cam-shaft sprockets during installation. The intake camshaft sprocket LH is identified by a projec-tion used to monitor camshaft position sensor.

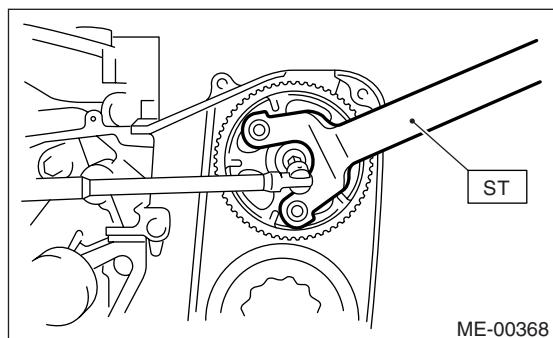

- 2) Install the camshaft position sensor. <Ref. to FU(H4DOTC)-31, INSTALLATION, Camshaft Position Sensor.>
- 3) Install the timing belt assembly. <Ref. to ME(H4DOTC)-50, INSTALLATION, Timing Belt Assembly.>
- 4) Install the belt cover. <Ref. to ME(H4DOTC)-47, INSTALLATION, Belt Cover.>
- 5) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-46, INSTALLATION, Crankshaft Pulley.>
- 6) Install the V-belt. <Ref. to ME(H4DOTC)-44, INSTALLATION, V-belt.>

C: INSPECTION

- 1) Check the sprocket teeth for abnormal wear and scratches.
- 2) Make sure there is no free play between sprocket and key.
- 3) Check the crankshaft sprocket notch used for sensor for damage and contamination of foreign matter.