


10. Air Cleaner Element


A: REPLACEMENT

1. NON-TURBO MODEL

- 1) Remove the bolt (A) which install air cleaner case to stays.
- 2) Remove the clip (B) above the air cleaner case.

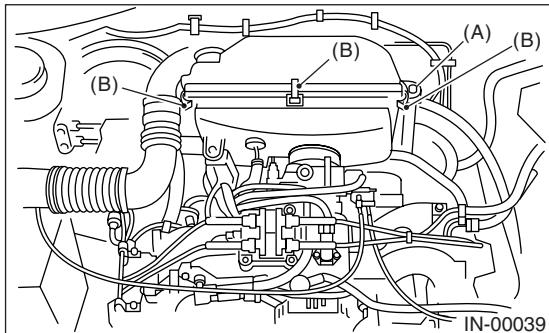

- 3) Remove the air cleaner element.

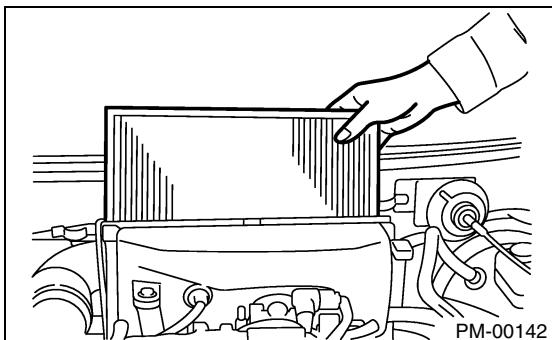


- 4) Install in the reverse order of removal.

CAUTION:


Fasten with a clip after inserting the lower tab of the case.

2. TURBO MODEL

- 1) Remove the clip (B) above the air cleaner case.

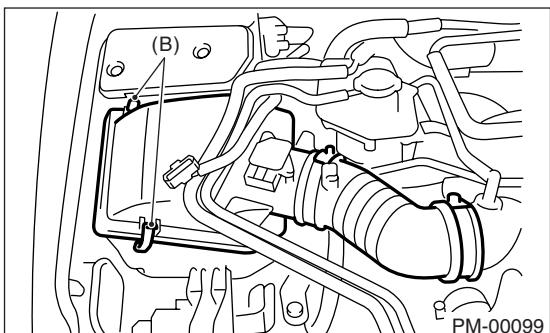

- 2) Remove the air cleaner element.

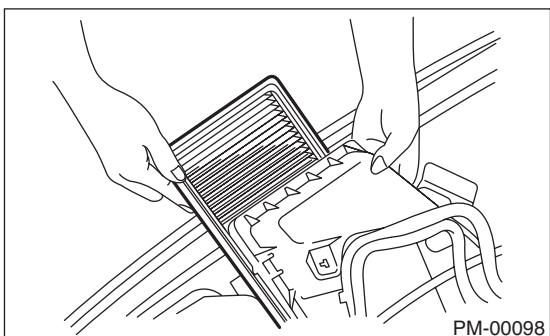

- 3) Install in the reverse order of removal.

CAUTION:

Align the protruding portion of the air cleaner upper cover with the hole in the air cleaner lower case, and then secure the upper cover to the lower case.

