

14. Transmission Oil


A: REPLACEMENT

1. MANUAL TRANSMISSION

1) Drain the gear oil by removing drain plug after allowing the engine to cool for 3 to 4 hours.

NOTE:

Before starting work, cool off the engine well.

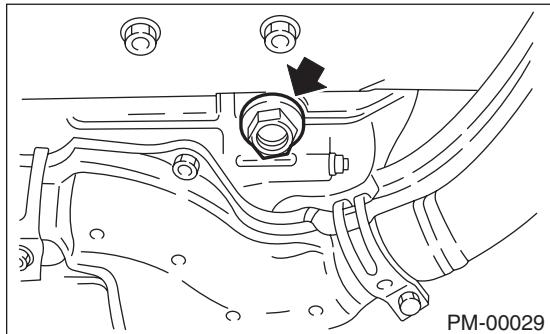

2) Reinstall the drain plug after draining gear oil and tighten it to the specified torque.

Tightening torque:

Gasket (Part No. 803926040):

44 N·m (4.5 kgf-m, 32.5 ft-lb)

Gasket (Part No. 803926070):

70 N·m (7.1 kgf-m, 52 ft-lb)


NOTE:

- Be sure to place a gasket between the transmission case and drain plug.
- Replace the gasket with a new one.
- Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

3) Fill the transmission gear oil through the oil level gauge hole up to the upper point of level gauge.

Gear oil capacity:

3.5 ℥ (3.7 US qt, 3.1 Imp qt)

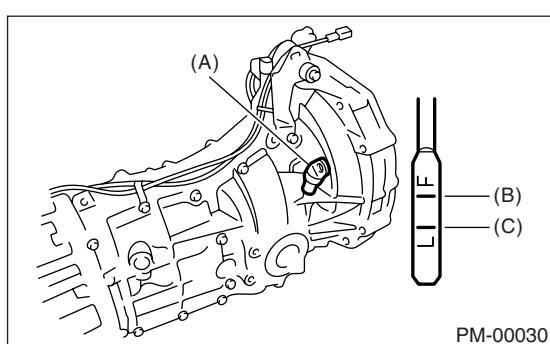

(A) Oil level gauge

(B) Upper level

(C) Lower level