
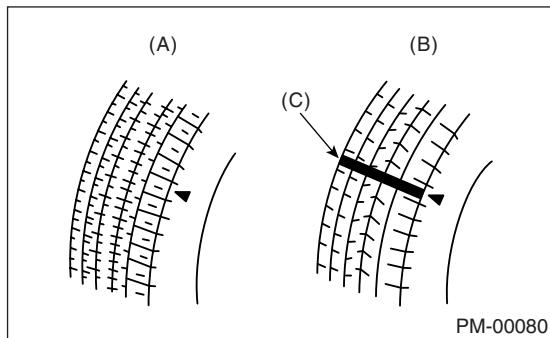


24. Tire rotation

A: INSPECTION

- 1) When the tread has worn down to 1.6 mm (2/32 in) or the wear indicator appears across the tread, replace the tire. (It is recommended to replace both left and right tires as a set.)
- 2) If abnormal uneven wear is found on the tire, adjust the wheel alignment.
- 3) Also, tire rotations should be done by interchanging front and rear tires as shown to ensure even wear of the tires.

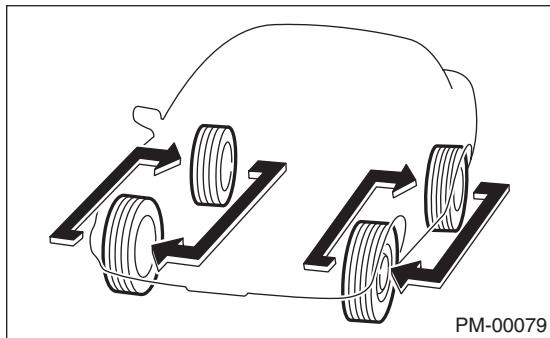

- (A) New tread
- (B) Worn tread
- (C) Tread wear indicator