


## 5. Spark Plugs

### A: REPLACEMENT

#### 1. NON-TURBO MODEL

- 1) Remove the intake duct and resonator chamber.
- 2) Remove the washer tank and put it aside.
- 3) Disconnect the spark plug cord.
- 4) Remove the spark plug with a plug-wrench.

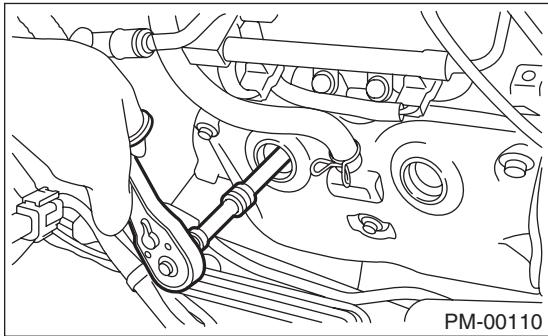

- 5) Set the new spark plug.

**Recommended spark plug :**

**CHAMPION RC10YC4 (Standard)**

**NGK BKR5E-11**

**NGK BKR6E-11**

**Spark plug gap**

**1.0 — 1.1 mm (0.039 — 0.043 in)**

- 6) Tighten the spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

**Tightening torque:**

**21 N·m (2.1 kgf-m, 15 ft-lb)**


**NOTE:**

- Be sure to place the gasket between the cylinder head and spark plug.
- If the torque wrench is not available, tighten spark plug until gasket contacts cylinder head; then tighten further 1/4 to 1/2 turns.


#### 2. TURBO MODEL

- 1) Disconnect the battery cables, and then remove the battery and battery carrier.
- 2) Remove the washer tank and put it aside.
- 3) Remove the air cleaner lower case.
- 4) Disconnect the connector from ignition coil.

- 5) Remove the ignition coil.

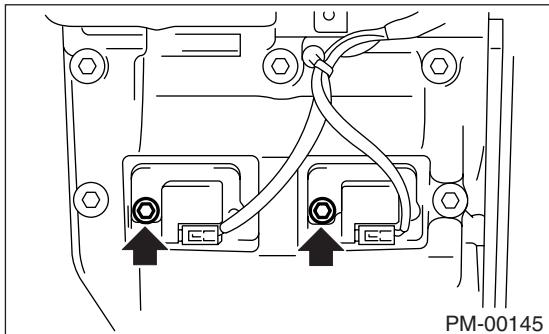

- 6) Remove the spark plug with spark plug socket.

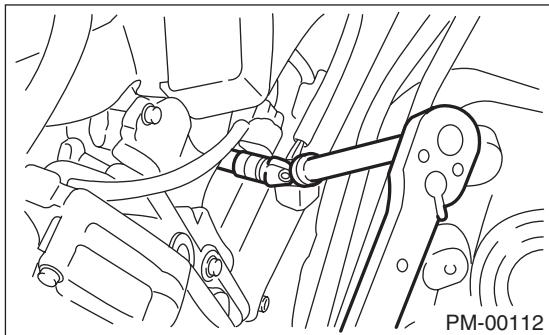

- 7) Set new spark plug.

**Recommended spark plug :**

**NGK PFR 6G**

- 8) Tighten the spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

**Tightening torque:**

**21 N·m (2.1 kgf-m, 15 ft-lb)**

- 9) Tighten the ignition coil.

**Tightening torque:**

**16 N·m (1.6 kgf-m, 12 ft-lb)**

**NOTE:**

- Be sure to place the gasket between cylinder head and spark plug.
- If a torque wrench is not available, tighten the spark plug until gasket contacts cylinder head; then tighten further 1/4 to 1/2 turn.