

8. Fuel Line

A: INSPECTION

The fuel line is located mostly internally, so check the pipes, areas near pipes, and engine compartment piping for rust, hose damage, loose bands, etc. If the faulty parts are found, repair or replace them. <Ref. to FU(H4SO)-68, Fuel Delivery, Return and Evaporation lines.> or <Ref. to FU(H4DOTC)-71, Fuel Delivery, Return and Evaporation Lines.>