

11. Extension Case Oil Seal

A: INSPECTION

Make sure ATF does not leak from the joint of transmission and propeller shaft. If a leak occurs, replace the oil seal. <Ref. to AT-47, REPLACEMENT, Extension Case Oil Seal.>

B: REPLACEMENT


- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.
- 3) Lift up the vehicle.
- 4) Clean the transmission exterior.
- 5) Drain the ATF completely.

NOTE:

Tighten the ATF drain plug after draining the ATF.

Tightening torque:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

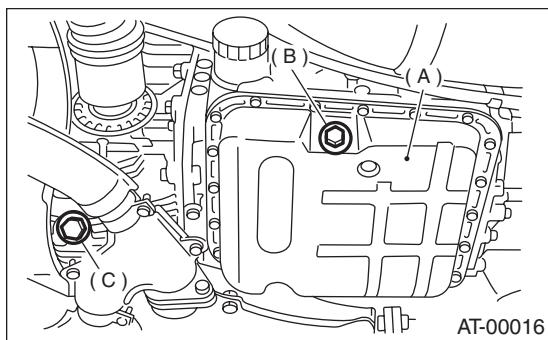

- (A) Oil pan
- (B) Drain plug
- (C) Differential oil drain plug

- 6) Remove the rear exhaust pipe and muffler.

Non-turbo model

<Ref. to EX(H4SO)-9, REMOVAL, Rear Exhaust Pipe., <Ref. to EX(H4SO)-10, REMOVAL, Muffler. >

Turbo model

<Ref. to EX(H4DOTC)-13, REMOVAL, Rear Exhaust Pipe., <Ref. to EX(H4DOTC)-14, REMOVAL, Muffler. >

- 7) Remove the heat shield cover. (if equipped)
- 8) Remove the propeller shaft. <Ref. to DS-14, REMOVAL, Propeller Shaft. >
- 9) Using the ST, remove the oil seal.
ST 398527700 PULLER ASSY
- 10) Using the ST, install the oil seal.
ST 498057300 INSTALLER
- 11) Install the propeller shaft. <Ref. to DS-15, INSTALLATION, Propeller Shaft. >
- 12) Install the heat shield cover. (if equipped)

- 13) Install the rear exhaust pipe and muffler.

Non-turbo model

<Ref. to EX(H4SO)-9, INSTALLATION, Rear Exhaust Pipe., <Ref. to EX(H4SO)-10, INSTALLATION, Muffler. >

Turbo model

<Ref. to EX(H4DOTC)-14, INSTALLATION, Muffler., <Ref. to EX(H4DOTC)-13, INSTALLATION, Rear Exhaust Pipe. >

- 14) Pour ATF and check the ATF level. <Ref. to AT-30, ATF. >