

### 14. Rear Vehicle Speed Sensor

#### A: REMOVAL

When removing the rear vehicle speed sensor, refer to Front Vehicle Speed Sensor. <Ref. to AT-52, REMOVAL, Front Vehicle Speed Sensor.>

#### B: INSTALLATION

When installing the rear vehicle speed sensor, refer to Front Vehicle Speed Sensor. <Ref. to AT-54, INSTALLATION, Front Vehicle Speed Sensor.>