

15.Torque Converter Turbine Speed Sensor

A: REMOVAL

When removing the torque converter turbine speed sensor, refer to Front Vehicle Speed Sensor. <Ref. to AT-52, REMOVAL, Front Vehicle Speed Sensor.>

B: INSTALLATION

When installing the torque converter turbine speed sensor, refer to Front Vehicle Speed Sensor. <Ref. to AT-54, INSTALLATION, Front Vehicle Speed Sensor.>