


23. Air Breather Hose

A: REMOVAL


- 1) Remove the air cleaner case. (Non-turbo model)
<Ref. to IN(H4SO)-6, REMOVAL, Air Cleaner Case.>
- 2) Remove the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
- 3) Disconnect the air breather hose.

- Non-turbo

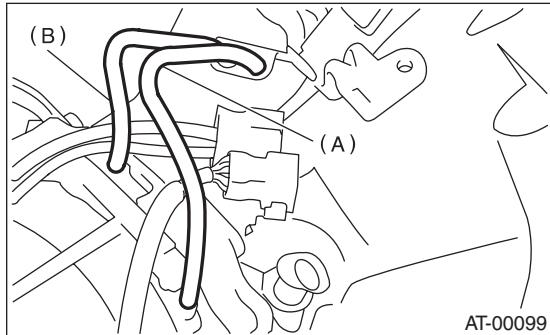

(A) Air breather hose (transmission case)
(B) Air breather hose (oil pump housing)

- Turbo model

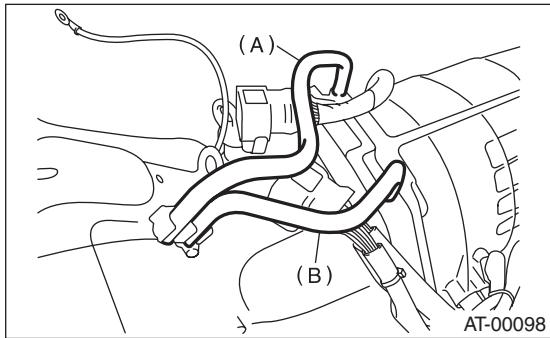


(A) Air breather hose (transmission case)
(B) Air breather hose (oil pump housing)

B: INSTALLATION


- 1) Install air breather hose.

- Non-turbo

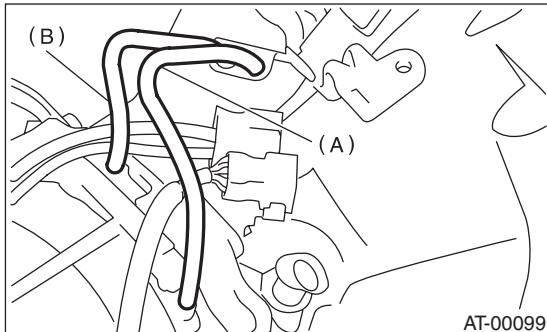

(A) Air breather hose (transmission case)
(B) Air breather hose (oil pump housing)

- Turbo model

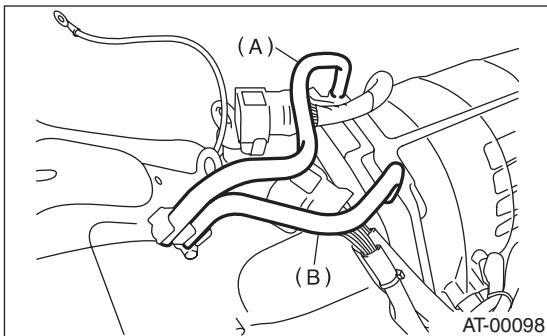

(A) Air breather hose (transmission case)
(B) Air breather hose (oil pump housing)

- 2) Install the air cleaner case. (Non-turbo model)
<Ref. to IN(H4SO)-6, INSTALLATION, Air Cleaner Case.>
- 3) Install the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>

C: INSPECTION

Make sure the hose is not cracked or clogged.