


24. Oil Charger Pipe

A: REMOVAL

- 1) Remove the air cleaner case. (Non-turbo model)
 <Ref. to IN(H4SO)-6, REMOVAL, Air Cleaner Case.>
- 2) Remove the intercooler. (Turbo model)
 <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
- 3) Remove the oil charger pipe, and remove the O-ring from the flange face.

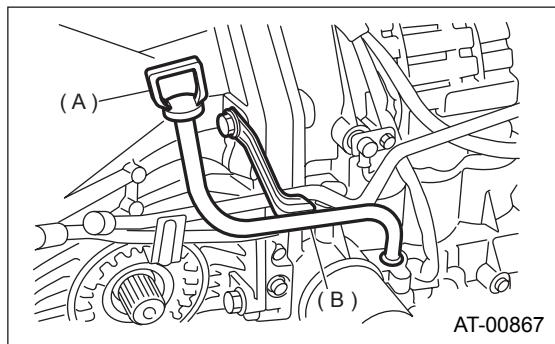

(A) Oil level gauge


(B) Oil charger pipe

B: INSTALLATION

- 1) Install the oil charger pipe with new O-ring.

Tightening torque:

41 N·m (4.2 kgf·m, 30.4 ft-lb)

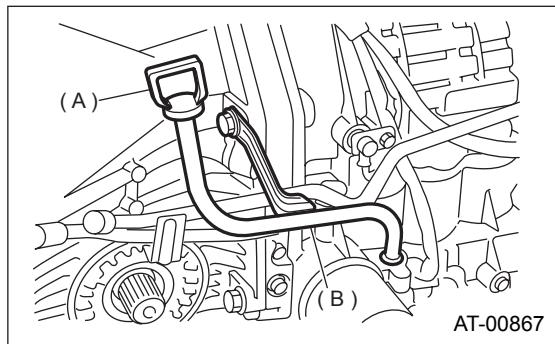

(A) Oil level gauge

(B) Oil charger pipe

- 2) Install the air cleaner case. (Non-turbo model)
 <Ref. to IN(H4SO)-6, INSTALLATION, Air Cleaner Case.>
- 3) Install the intercooler. (Turbo model)
 <Ref. to IN(H4DOTC)-12, INSTALLATION, Intercooler.>

C: INSPECTION

Make sure the oil charger pipe is not deformed or otherwise damaged.