

4. Road Test

A: INSPECTION

1. GENERAL PRECAUTION

Road tests should be conducted to properly diagnose the condition of the automatic transmission.

CAUTION:

When performing the test, do not exceed posted speed limit.

2. D RANGE SHIFT FUNCTION

Check shifting between 1st \Leftrightarrow 2nd \Leftrightarrow 3rd \Leftrightarrow 4th while driving on normal city streets.

3. D RANGE SHIFT SHOCK

Check the shock level when shifting up during normal driving.

4. KICK-DOWN FUNCTION

Check kick-down for each gear. Also check the kick-down shock level.

5. ENGINE BRAKE OPERATION

- Check the engine braking effect in 3rd gear by shifting between D \Leftrightarrow 3 range while driving in 4th gear of D range [50 to 60 km/h (31 to 37 MPH)].
- Check the engine braking effect in 2nd gear by shifting between 3 \Leftrightarrow 2 range while driving in 3rd gear of 3 range [40 to 50 km/h (25 to 31 MPH)].
- Check the engine braking effect in 1st gear by shifting between 2 \Leftrightarrow 1 range while driving in 2nd gear of 2 range [20 to 30 km/h (12 to 19 MPH)].

6. LOCK-UP FUNCTION

Check that the engine speed does not change sharply when the accelerator pedal is lightly depressed when driving on flat roads at normal speed in the D range.

7. P RANGE OPERATION

Stop the vehicle on an uphill grade of 5% or more and shift to "P" range. Check that the vehicle does not move when the parking brake is released.

8. UNUSUAL SOUNDS AND VIBRATION

Check for unusual sounds and vibration while driving and during shifting.

9. CLIMBING CONTROL FUNCTION

- Check that the gear remains in 3rd when going up a grade.
- Check that the gear remains in 3rd when applying the brakes while going down a grade.

10. TRANSFER CLUTCH

Check if tight corner braking occurs when the vehicle is started with steering wheel held at a fully turned position.(MPT model)

11. OIL LEAK

After the driving test, inspect for oil leaks.