



43. Transmission Control Device

A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to AT-39, REMOVAL, Automatic Transmission Assembly.>
- 2) Extract the torque converter clutch assembly. <Ref. to AT-78, REMOVAL, Torque Converter Clutch Assembly.>
- 3) Remove the input shaft.
- 4) Lift-up lever behind the transmission harness connector and disconnect it from stay.
- 5) Disconnect the air breather hose. <Ref. to AT-76, REMOVAL, Air Breather Hose.>
- 6) Disconnect inhibitor switch connector from stay.
- 7) Wrap vinyl tape around the nipple attached to the air breather hose.
- 8) Remove pitching stopper bracket.
- 9) Remove the inhibitor switch.

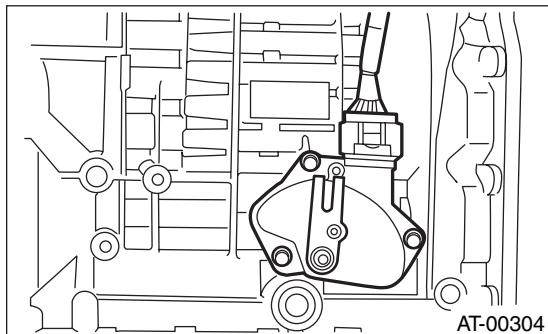


- 10) Remove control valve body assembly. <Ref. to AT-58, REMOVAL, Control Valve Body.>
- 11) Pull off the straight pin of manual plate.

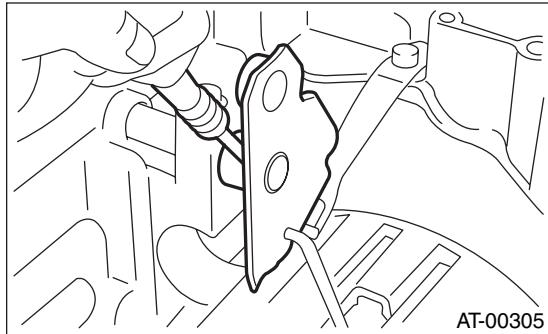

- 12) Remove bolts securing select lever, then remove select lever, manual plate and parking rod.


NOTE:

Be careful not to damage the lips of the press-fitted oil seal in the case.

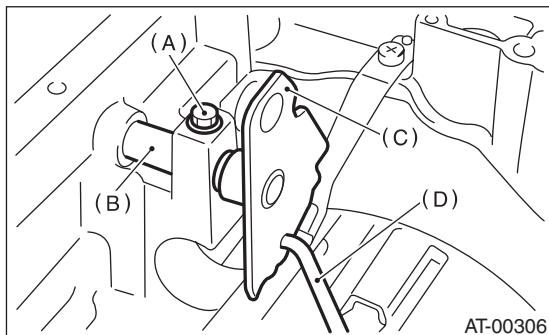

- (A) Bolt
- (B) Range select lever
- (C) Manual plate
- (D) Parking rod


- 13) Remove the detention spring.

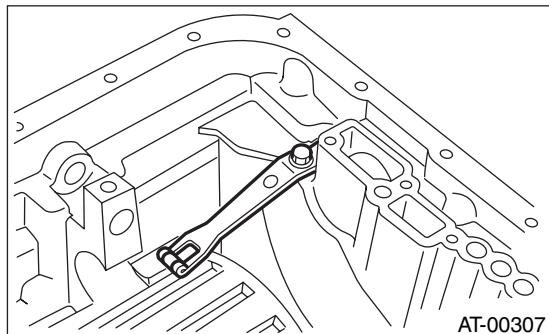

B: INSTALLATION

- 1) Install detention spring to transmission case.

Tightening torque:
 $6 \text{ N}\cdot\text{m (0.6 kgf}\cdot\text{m, 4.3 ft-lb)}$

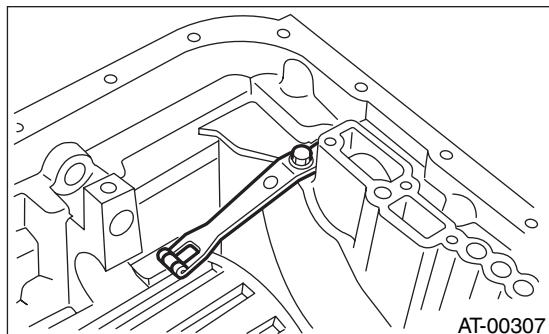


TRANSMISSION CONTROL DEVICE

AUTOMATIC TRANSMISSION


2) Insert range select lever, and tighten bolt.

Tightening torque:

6 N·m (0.6 kgf·m, 4.3 ft-lb)

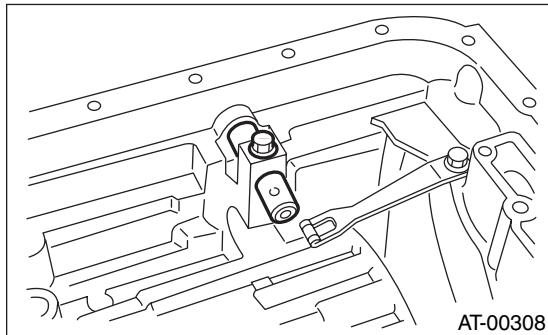


3) Insert manual plate and parking rod.

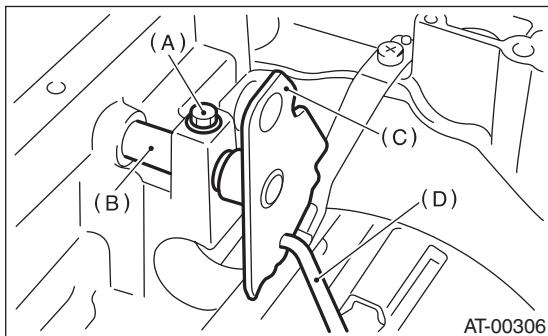

- (A) Bolt
- (B) Range select lever
- (C) Manual plate
- (D) Parking rod

4) Insert spring pin to manual plate.

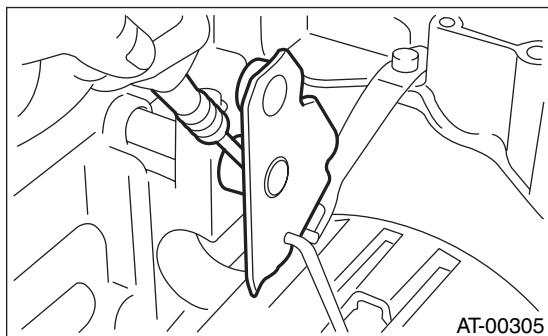

5) Install control valve assembly and oil pan. <Ref. to AT-59, INSTALLATION, Control Valve Body.>

6) Turn over the transmission case to its original position.


7) Install pitching stopper bracket.

Tightening torque:

41 N·m (4.2 kgf·m, 30.4 ft-lb)

8) Install inhibitor switch and adjust the inhibitor switch. <Ref. to AT-48, Inhibitor Switch.>

9) Insert inhibitor switch and transmission connector into stay.

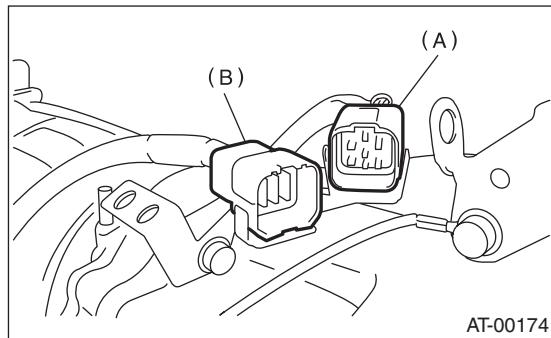


- (A) Transmission harness
- (B) Inhibitor switch harness

10) Install air breather hose. <Ref. to AT-76, INSTALLATION, Air Breather Hose.>

11) Insert the input shaft while turning lightly by hand. At this time, not to damage the bushing.

Normal protrusion A:

50 — 55 mm (1.97 — 2.17 in)

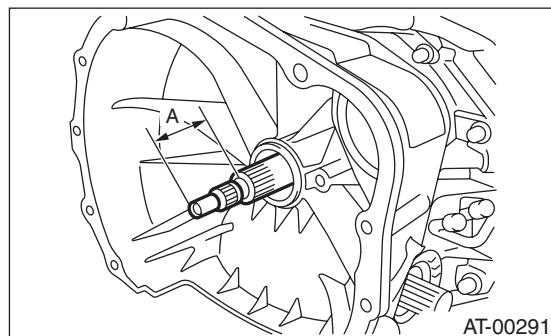

12) Install the torque converter clutch assembly. <Ref. to AT-78, INSTALLATION, Torque Converter Clutch Assembly.>

13) Install the transmission assembly to the vehicle. <Ref. to AT-41, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

Make sure the manual lever and detention spring are not worn or otherwise damaged.