

# AT OIL TEMP WARNING LIGHT DISPLAY

## AUTOMATIC TRANSMISSION (DIAGNOSTICS)

### 10. AT OIL TEMP Warning Light Display

#### A: INSPECTION


When any on-board diagnostics item is malfunctioning, the display on the power indicator light blinks from the time the malfunction is detected after starting the engine until the ignition switch is turned OFF. The malfunctioning part or unit can be

determined by a trouble code during the on-board diagnostics operation. Problems which occurred previously can also be identified through the memory function. If the AT OIL TEMP warning does not show a problem (although a problem is occurring), the problem can be determined by checking the performance characteristics of each sensor using the select monitor. Indicator signal is as shown in the figure.


- Ignition switch (engine OFF)





- Normal

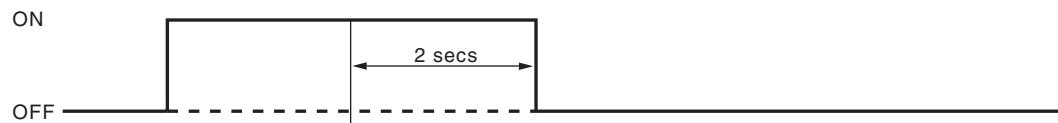

- Abnormal (Trouble occurs.)

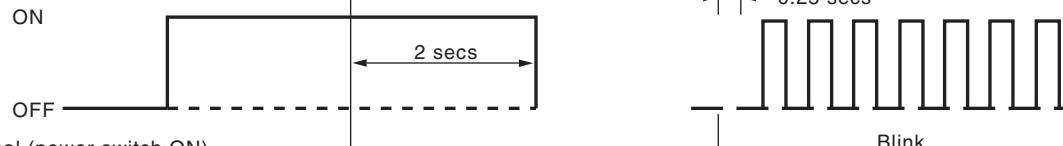

- Normal (power switch ON)

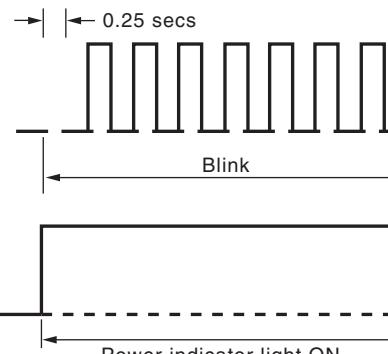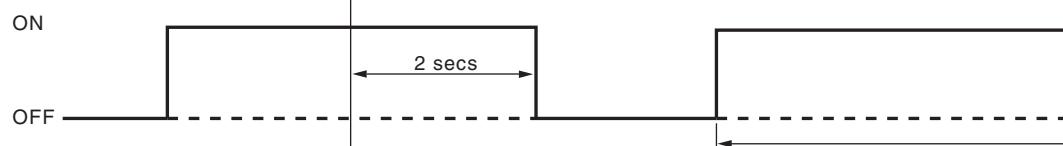

AT-00344