


ELECTRICAL COMPONENTS LOCATION

AUTOMATIC TRANSMISSION (DIAGNOSTICS)





4. Electrical Components Location

A: LOCATION

1. CONTROL MODULE

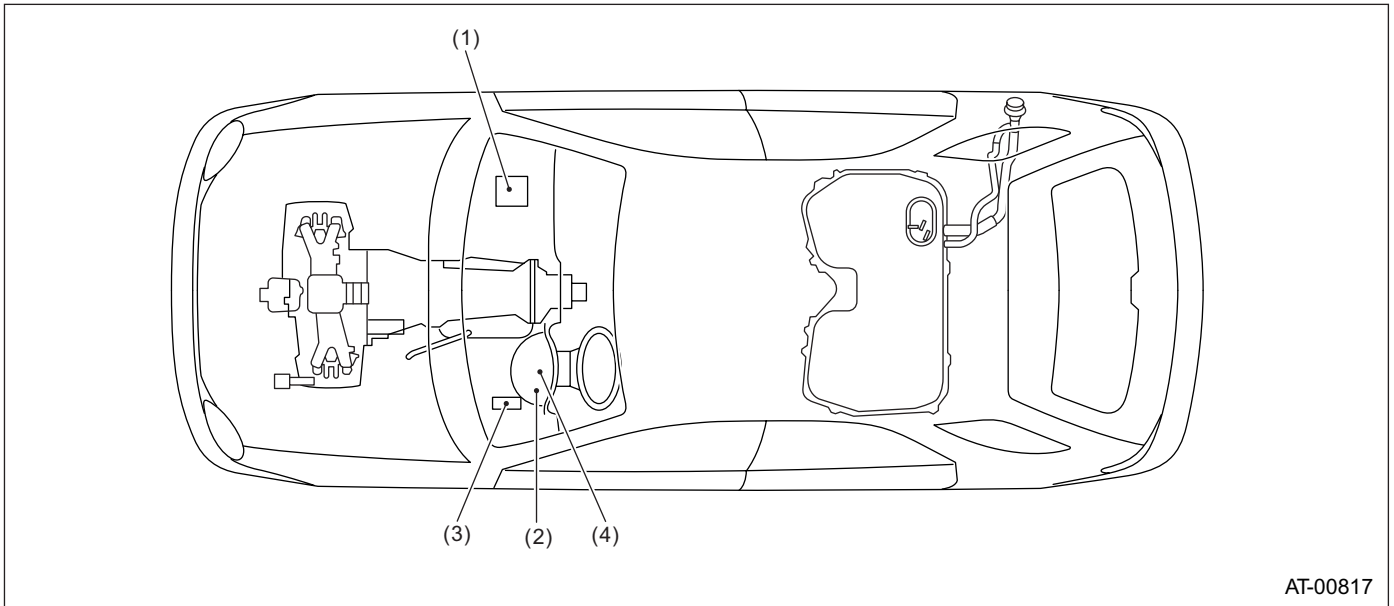


- | | |
|---|---------------------------------------|
| (1) Engine control module (ECM) | (3) Transmission control module (TCM) |
| (2) ATF temperature warning light (AT diagnostic indicator light) | (4) Data link connector |

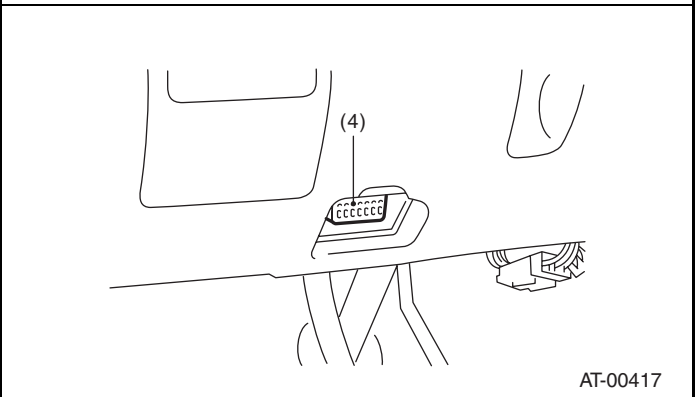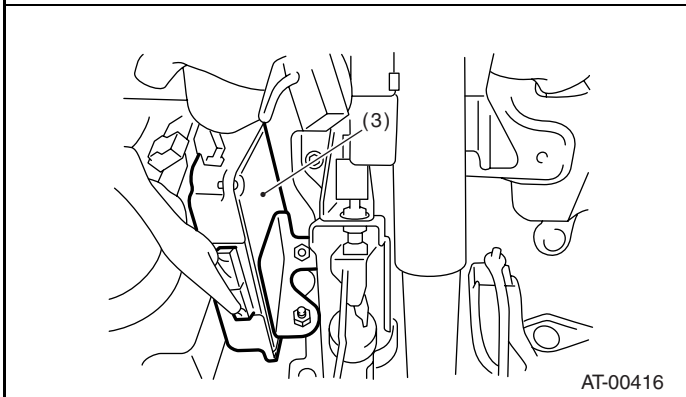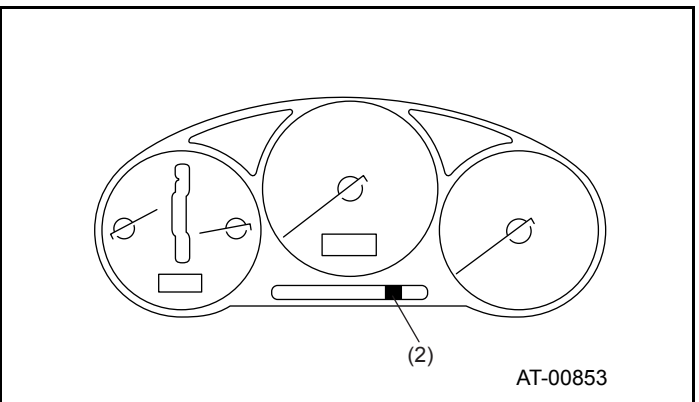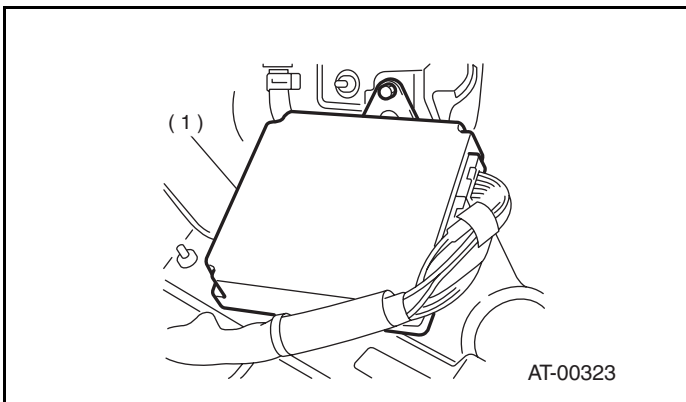

ELECTRICAL COMPONENTS LOCATION

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

2. SENSOR







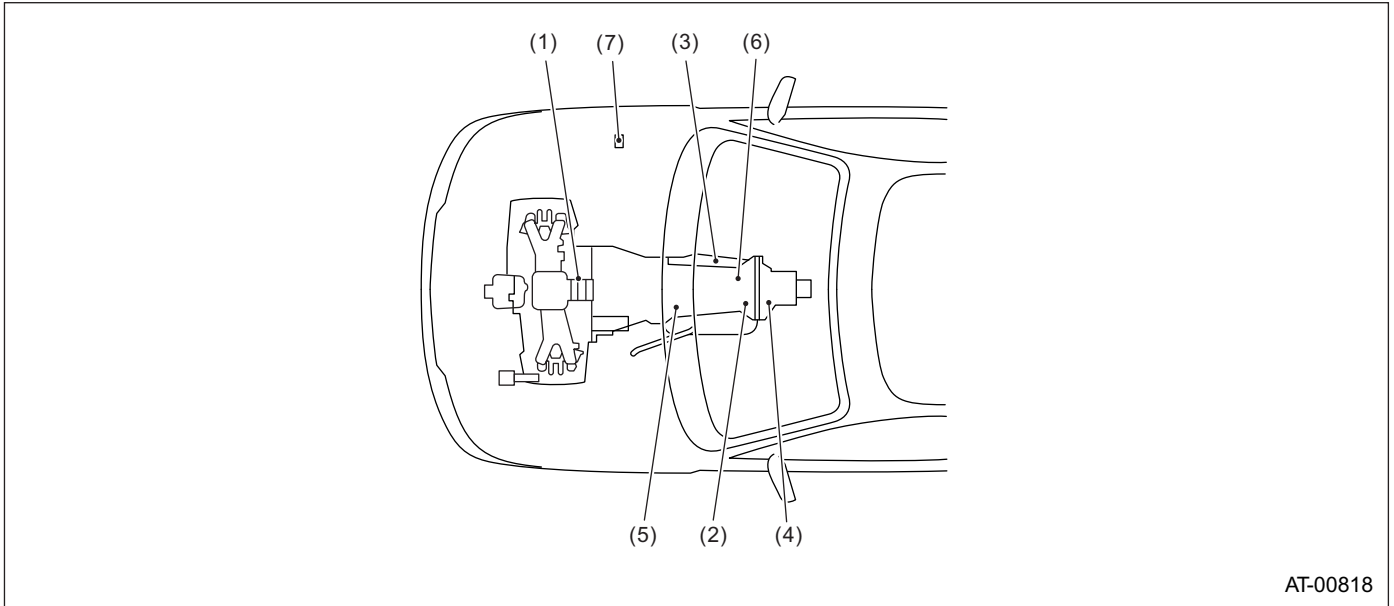


AT-00818

- | | | |
|--------------------------------|---|---|
| (1) Throttle position sensor | (4) Rear vehicle speed sensor | (6) ATF temperature sensor |
| (2) Front vehicle speed sensor | (5) Torque converter turbine speed sensor | (7) Dropping resistor (Non-turbo model) |
| (3) Inhibitor switch | | |

ELECTRICAL COMPONENTS LOCATION


AUTOMATIC TRANSMISSION (DIAGNOSTICS)

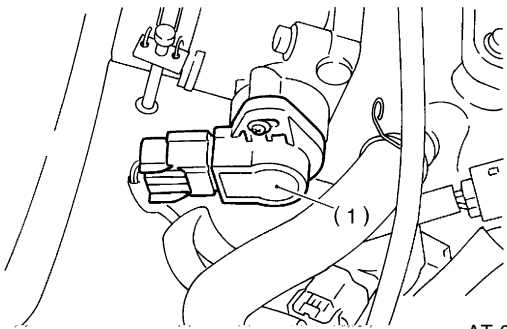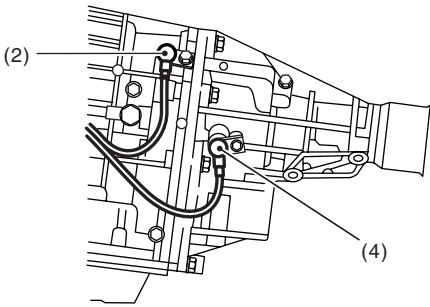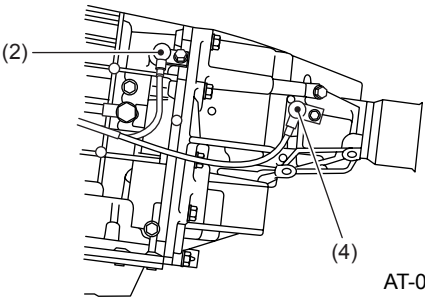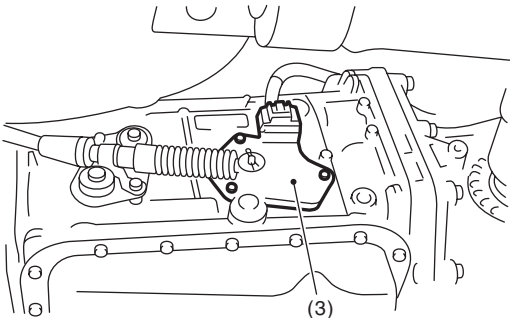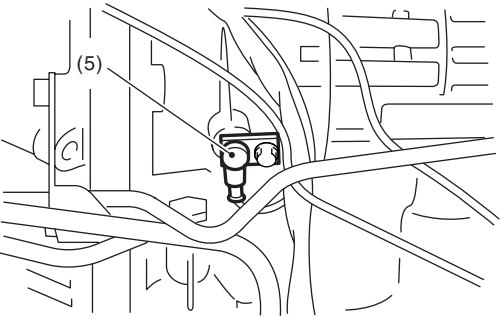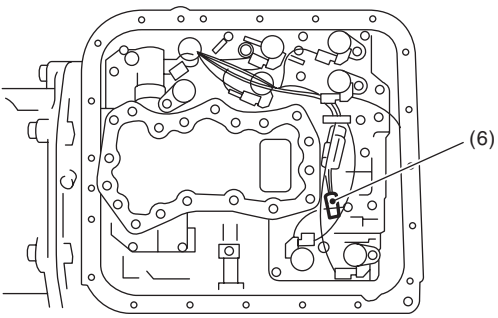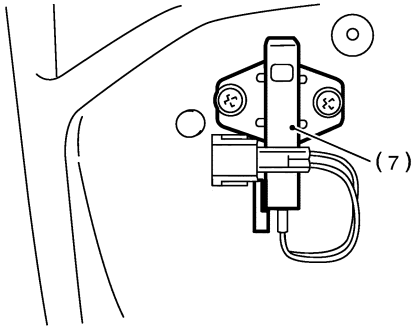 AT-00328	Non-turbo model  AT-00329
Turbo model  AT-00819	 AT-00330
 AT-00331	 AT-00332
 AT-00820	SUBARU.

ELECTRICAL COMPONENTS LOCATION

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

3. SOLENOID

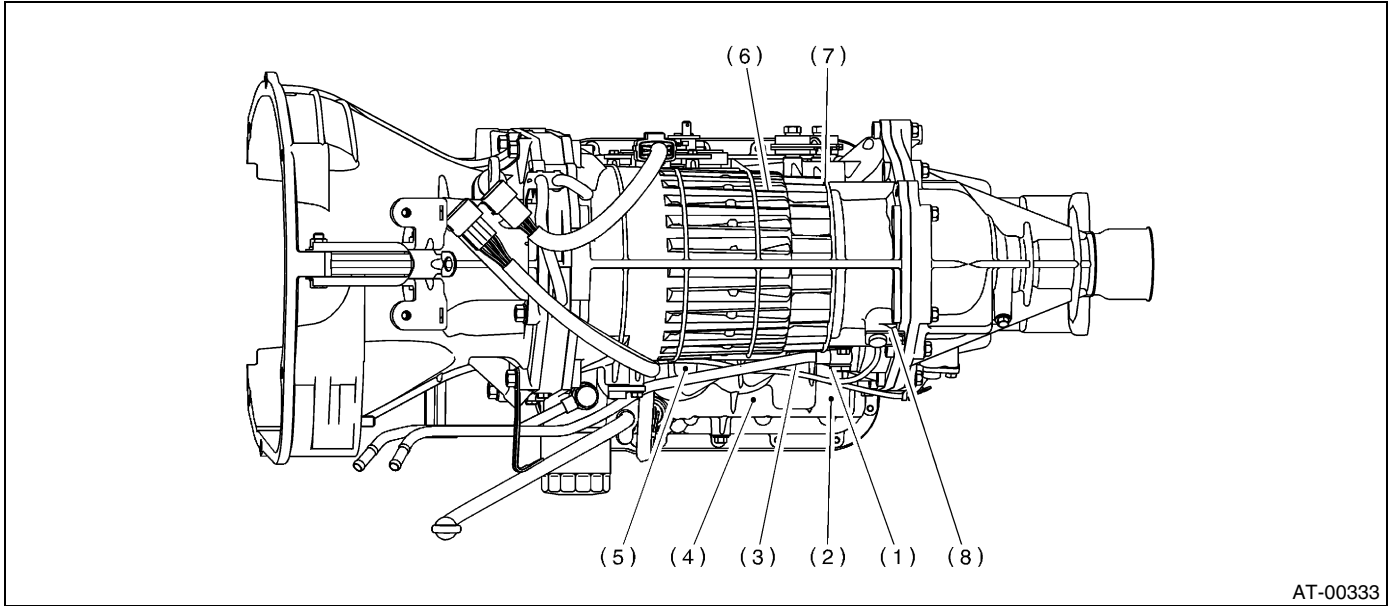

- | | | |
|---------------------------------|--------------------------------|-------------------------------|
| (1) Solenoid 1 | (4) Low clutch timing solenoid | (7) 2-4 brake timing solenoid |
| (2) Solenoid 2 | (5) Lock-up duty solenoid | (8) Transfer duty solenoid |
| (3) Line pressure duty solenoid | (6) 2-4 brake duty solenoid | |

