



6. Integrated Module

A: REMOVAL


1) Disconnect the ground terminal from battery.

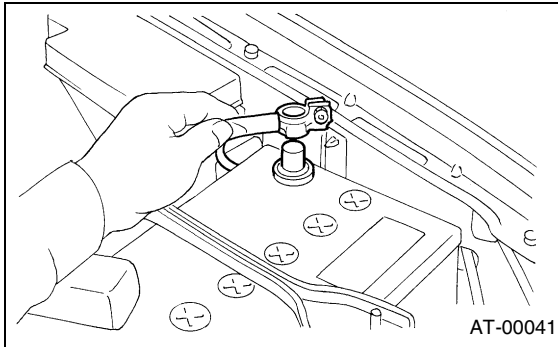

2) Remove the lower cover.

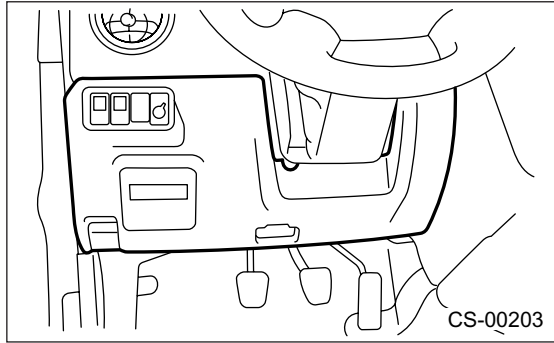


3) Remove the knee bolster.

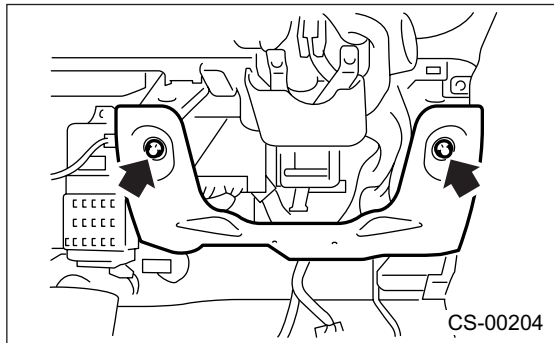

4) Disconnect the connector from integrated module.

5) Remove the integrated module.

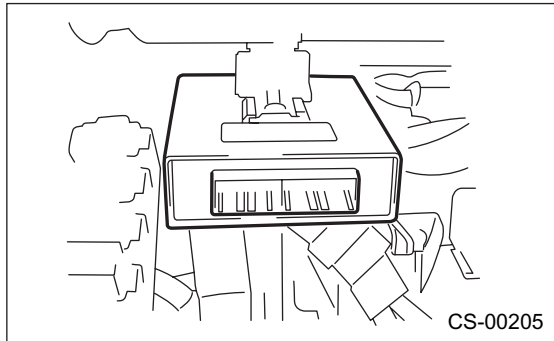

B: INSTALLATION

Install in the reverse order of removal.